

## User Manual

### IPM-03 PDU management software

**W** kWh Monitored PDU

**WS** kWh Switched PDU

**Wi** Outlet kWh Monitored PDU

**WSi** Outlet kWh Switched PDU



Designed and manufactured by Austin Hughes

FC CE  REACH

## Legal Information

First English printing, October 2002

Information in this document has been carefully checked for accuracy; however, no guarantee is given to the correctness of the contents. The information in this document is subject to change without notice. We are not liable for any injury or loss that results from the use of this equipment.

## Safety Instructions

**Please read all of these instructions carefully before you use the device. Save this manual for future reference.**

- Unplug equipment before cleaning. Don't use liquid or spray detergent; use a moist cloth.
- Keep equipment away from excessive humidity and heat. Preferably, keep it in an air-conditioned environment with temperatures not exceeding 40° Celsius (104° Fahrenheit).
- When installing, place the equipment on a sturdy, level surface to prevent it from accidentally falling and causing damage to other equipment or injury to persons nearby.
- When the equipment is in an open position, do not cover, block or in any way obstruct the gap between it and the power supply. Proper air convection is necessary to keep it from overheating.
- Arrange the equipment's power cord in such a way that others won't trip or fall over it.
- If you are using a power cord that didn't ship with the equipment, ensure that it is rated for the voltage and current labelled on the equipment's electrical ratings label. The voltage rating on the cord should be higher than the one listed on the equipment's ratings label.
- Observe all precautions and warnings attached to the equipment.
- If you don't intend on using the equipment for a long time, disconnect it from the power outlet to prevent being damaged by transient over-voltage.
- Keep all liquids away from the equipment to minimize the risk of accidental spillage. Liquid spilled on to the power supply or on other hardware may cause damage, fire or electrical shock.
- Only qualified service personnel should open the chassis. Opening it yourself could damage the equipment and invalidate its warranty.
- If any part of the equipment becomes damaged or stops functioning, have it checked by qualified service personnel.

## What the warranty does not cover

- Any product, on which the serial number has been defaced, modified or removed.
- Damage, deterioration or malfunction resulting from:
  - ☐ Accident, misuse, neglect, fire, water, lightning, or other acts of nature, unauthorized product modification, or failure to follow instructions supplied with the product.
  - ☐ Repair or attempted repair by anyone not authorized by us.
  - ☐ Any damage of the product due to shipment.
  - ☐ Removal or installation of the product.
  - ☐ Causes external to the product, such as electric power fluctuation or failure.
  - ☐ Use of supplies or parts not meeting our specifications.
  - ☐ Normal wear and tear.
  - ☐ Any other causes which does not relate to a product defect.
- Removal, installation, and set-up service charges.

## Regulatory Notices Federal Communications Commission (FCC)

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

Any changes or modifications made to this equipment may void the user's authority to operate this equipment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Re-position or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

## Unpacking

The equipment comes with the standard parts shown on the package contents. Check and make sure they are included and in good condition. If anything is missing, or damage, contact the supplier immediately.



## Package contents

### ( 1 ) Vertical W / Wi / WS / WSi PDU x 1


- **VMS** mounting screw, set of 2 or 3



- **VMB** mounting bracket set

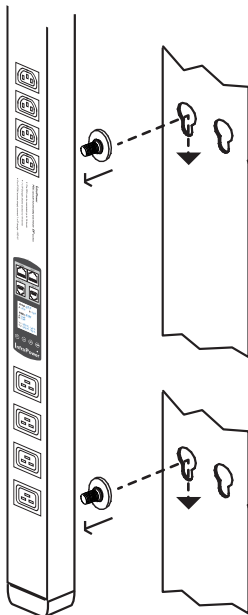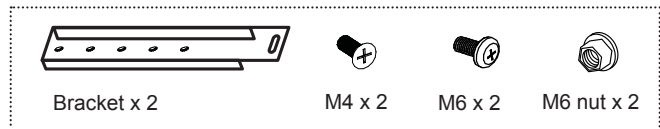

OR

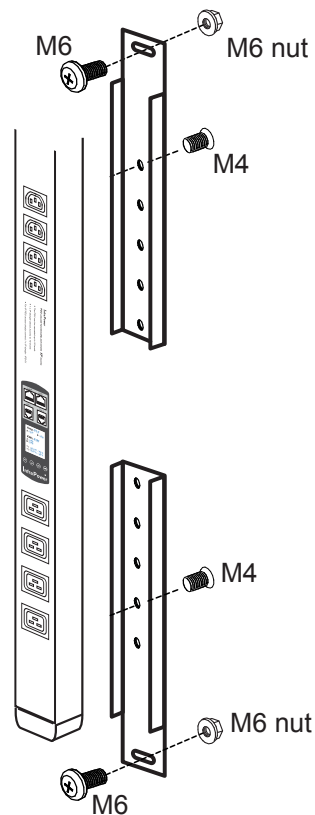

### ( 2 ) Rackmount W / Wi / WS / WSi PDU x 1



All electrical power and power control wiring must be installed by a qualified electrician and comply with local and national regulations.

## Power ON

- Connect the PDU into an appropriately rated receptacle
- When the PDU is power on, the LED display will light up. That means all outlets are activated
- Keep the equipments in the power off position until it is plugged into the PDU



Don't exceed the outlet, branch or phase limitations

# Content

## **Part I. Hardware ..... P. 1**

- < 1.1 > **W / Wi / WS / WSi PDU Key Features**
- < 1.2 > **W Meter Display & Setting**
- < 1.3 > **PDU Meter Setting & Cascade**
- < 1.4 > **Temp. / Humidity Sensor Connection & Specification**
- < 1.5 > **IP Dongle Installation & Connection**
- < 1.6 > **Easy Change on PDU Power Feed Position**

## **Part II. Software ..... P. 11**

- < 2.1 > **Key Features**
- < 2.2 > **IP Dongle Configuration**
- < 2.3 > **Hardware Requirements of the Management PC**
- < 2.4 > **Supported OS Platform & Language**
- < 2.5 > **Software Download**
- < 2.6 > **First Time Start-up Setting**
- < 2.7 > **Change Port no. of Web Server**

## **Part III. System Setup & Remote Access ..... P. 18**

- < 3.1 > **System Setup**
- < 3.2 > **Remote Access**

## **Part IV. Software Usage & Operation ..... P. 25**

# Content

**Part V. Events / Log / Report ..... P.35**


**Part VI. SNMP ..... P.39**

**Part VII. FAQ ..... P. 41**

**Part VIII. Troubleshooting ..... P. 45**


## Part I. Hardware


### < 1.1 > W / Wi / WS / WSi PDU Key Features


	kWh PDU		Outlet kWh PDU	
	Monitored	Switched	Monitored	Switched
	W	WS	Wi	WSi
Outlet Measurement			✓	✓
Circuit kWh Measurement	✓	✓	✓	✓
Temp-Humid Sensor port x 2	✓	✓	✓	✓
16 Levels in Single Daisy Chain	✓	✓	✓	✓
One IP Access 16 PDU Levels	✓	✓	✓	✓
SNMP Capability via IP Dongle	✓	✓	✓	✓
Hot-pluggable Meter w/ 1.8" Color LCD	✓	✓	✓	✓
Outlet Switch ON / OFF		✓		✓
Local kWh & Amp Meter	✓	✓	✓	✓
Vertical & Horizontal PDUs	✓	✓	✓	✓
Tool-less Mounting for Vertical PDU	✓	✓	✓	✓
Management Software Editions ( Free )	IPM-03 IPM-02 PPS-02-S (via IPD-02S)	IPM-03 IPM-02 PPS-02-S (via IPD-02S)	IPM-03 - PPS-02-S (via IPD-02S)	IPM-03 - PPS-02-S (via IPD-02S)

## < 1.2 > W Meter Display & Setting

All W series PDUs are equipped with a highly advanced and sophisticated component - W Meter. It provides the cascade ports for daisy chain up to 16 x PDU. Furthermore, for IP PDU access, simply connect 1 x IP Dongle for all daisy chain PDUs to save IP network address. Two sensor ports are integrated for temperature & humidity monitoring. Creatively, 1.8" color LCD display offers a real time local monitoring and detailed PDU status.

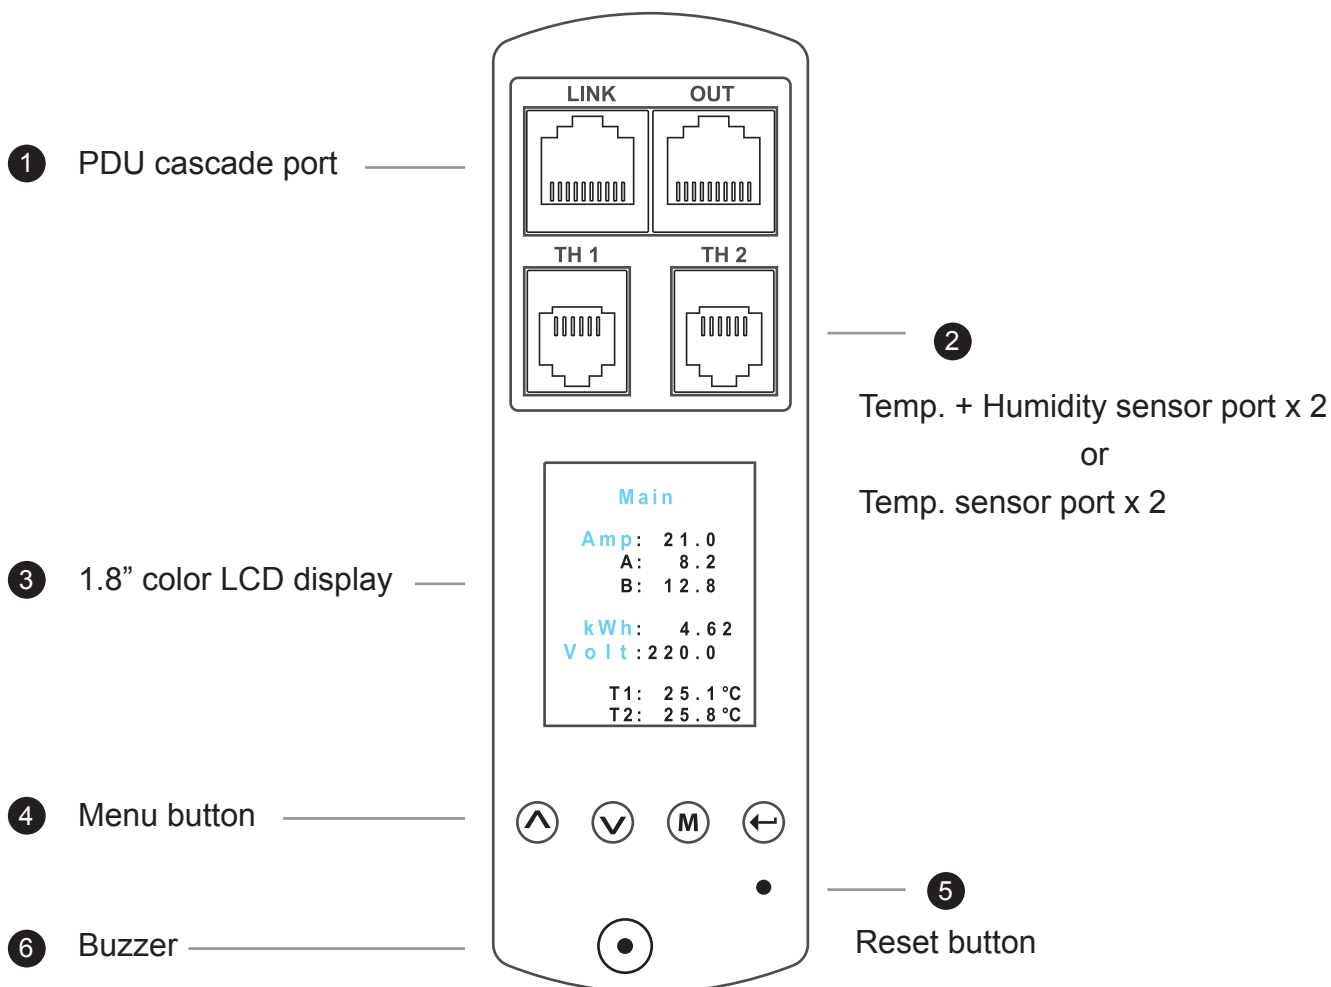

 Reset button is to re-power the meter. It will not affect any settings and memories.

 The buzzer only sounds when the circuit amp. over the alarm amp. setting.

 For 1U / 2U rackmount PDU, 3 4 5 on the front, 1 2 on the rear


## < 1.2 > W Meter Display & Setting

W meter 1.8" color LCD provides a sharp and highly visible reading for the local reading of Current ( Amp ), Voltage ( Volt ), Power ( kW ), Energy Consumption ( kWh ), Power Factor, Temperature & Humidity.

### Display for PDU Monitoring

- Amp, Voltage & Power Factor
- kWh Energy Consumption
- Active & Apparent Power
- Temp. & Humidity

W Meter provides the buttons to select the displays

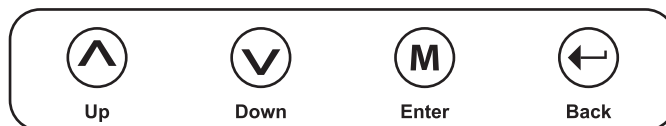

Display 1	Display 2	Display 3	Display 4	Display 5	Display 7	Display 8
<b>Main</b> Amp: 21.0 A: 8.2 B: 12.8 kWh: 4.62 Volt: 220.0 T1: 25.1°C T2: 25.8°C	<b>PDU ID</b> Group: 240 Level: 16	<b>Temp / Hum</b> T1: 25.1°C T2: 25.8°C H1: 78% H2: 66%	<b>Circuit A</b> 8.2 Amp  Peak: 16.3 Load Amp 03:59:23 31-Dec-09	<b>Circuit B</b> 12.8 Amp  Peak: 17.2 Load Amp 23:59:40 31-Jan-11	<b>Power</b> Factor 0.9 Active Power 4.15kW Apparent Power 4.62kVA	<b>Energy</b> Cumulative kWh 99999.99 From 23:59:00 30-Nov-06

Display 1.1
<b>Amp</b> 21.0 A 8.2 B 12.8

Press (M) to change °C / °F

### Display for Outlet Measurement

- Outlet Amp
- Outlet kWh
- ( Wi and WSi series PDUs only )



**Display 6 only for Wi / WSi outlet measurement PDU**

Display 6	Display 6.1	Display 6.2	Display 6.3	Display 6.4
<b>Outlet Amp / kWh</b> Std. Outlet C19 Outlet	<b>Outlet</b> 01 IEC C13 1.0 Amp 0.22 kWh	<b>Outlet</b> 02 5-20R 3.0 Amp 0.66 kWh	<b>Outlet</b> 03 BS 1363 4.0 Amp 0.88 kWh	<b>Outlet</b> 04 Schuko 5.0 Amp 1.10 kWh




## < 1.2 > W Meter Display & Setting


W meter allows the user to do some settings below :

### Display for Local PDU Setting

- PDU Level
- Meter buzzer
- Meter screen
- PDU Outlet ON

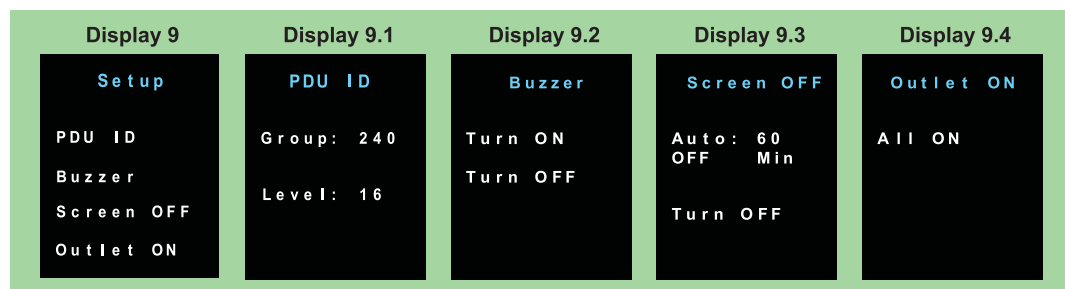

Display 9.1

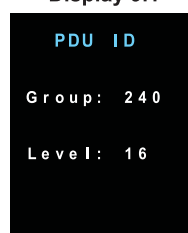

#### PDU level setting :


**Step 1** - Press the & button to display no.9 and press to confirm

**Step 2** - Press the & button to PDU ID and press to confirm

**Step 3** - In display 9.1, Press the & button to select PDU level no. & press to confirm

**Step 4** - Press to exit

Display 9.2

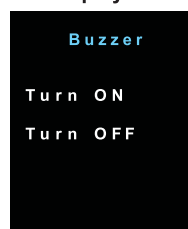

#### Buzzer :


W meter allows the user to set the meter buzzer ON / OFF by meter's 4 buttons.

All PDUs are shipped with the buzzer in ON status.

When the PDU's circuit or outlet Amp is over alarm level, the buzzer will sound.

The user can press any button to stop the buzzer sound.

Display 9.3

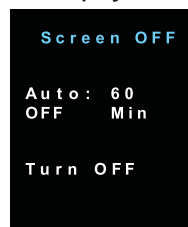

#### Screen OFF :

All PDUs are shipped with the meter LCD in always ON status.

W meter allows the user to turn off the meter LCD by time setting ( 1 - 60 mins, 0 = always ON )

When the meter is in OFF status, the user can press any button to make it ON.

Display 9.4



#### Outlet ON :


This is for WS kWh Switched / WSi outlet kWh Switched PDU models only. All Switched PDUs are shipped in outlet ON status.

## < 1.3 > PDU Meter Setting & Cascade

### PDU Daisy Chain up to 16 Levels

The W meter built-in not only provides the local power monitoring, but also the connection ports for the PDU daisy chain. For daisy chain connection, each PDU just simply to be connected in series to the next by Cat5/6 cables. Maximum 16 PDUs are supported in one daisy chain group.

- The PDU can be cascaded up to 16 levels
- For IP PDU access simply connect 1 x IP dongle - IPD-02-S
- 1 x IP dongle allows access to 16 levels

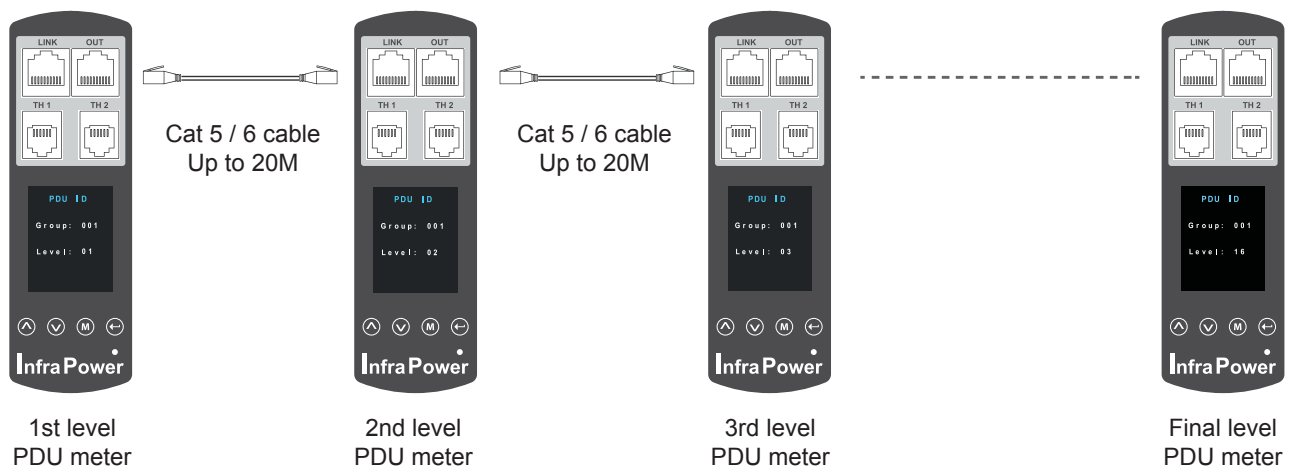

For **PDU level setting**, please refer to previous page.

## < 1.4 > Temp. / Humidity Sensor Connection & Specification

W meter provides 2 sensor ports for Temp. & Humidity monitoring. The user can see the Temp. / Humidity reading not only from the local meter display but also from remote management software.

- low profile design with magnetic base for easy affixing to the rack cabinet
- Plug n Play
- sensor with 2M or 4M cord
- pair of sensors can be connected to a single W meter




### Temp. & Humid. Sensor

Model :  
IG - TH01 - 2M ( 2M cord )  
IG - TH01 - 4M ( 4M cord )



### Temp. Sensor

Model :  
IG - T01 - 2M ( 2M cord )  
IG - T01 - 4M ( 4M cord )

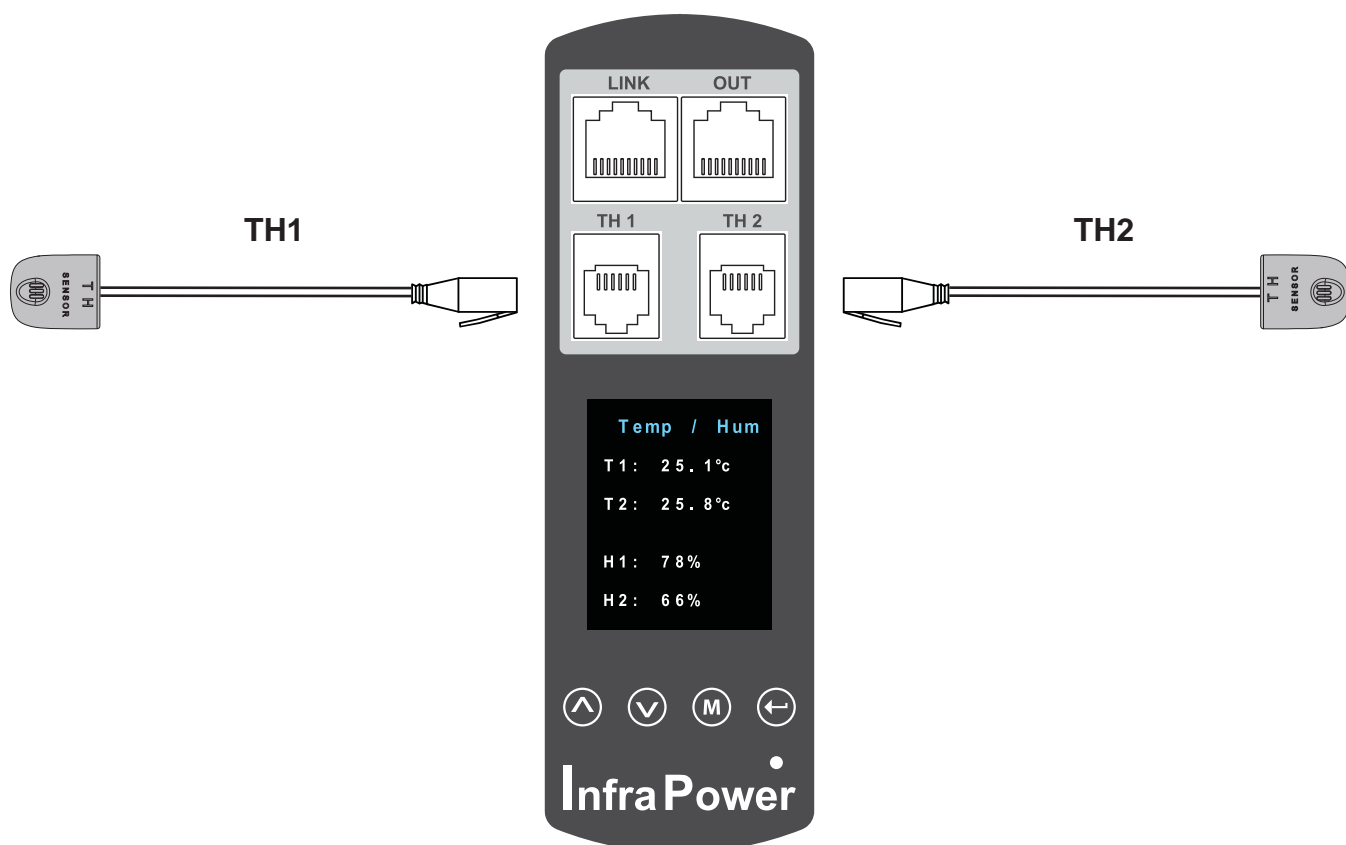

## < 1.4 > Temp. / Humidity Sensor Connection & Specification



		Temp. & Humid. Sensor	Temp. Sensor
Part no.		IG - TH01	IG - T01

Temperature Sensitivity	Range	0 to 80°C ( 32 to 176°F )	
	Accuracy	±1.0°C typical ( ±2°F )	±1.5°C ( ±3°F )
	Resolution	0.1°C ( 0.2°F )	
	Response Time	5 to 30 sec	

Relative Humidity Sensitivity	Range	0 to 100% R.H	/
	Accuracy	0 to 100, ±8.0% R.H 20 to 80, ±4.5% R.H.	/
	Resolution	1% R.H.	/
	Response Time	8 sec	/

Power Requirement	Voltage	12VDC, powered by sensor port	
	Current Consumption	20mA	
	Power consumption	0.24 Watt	
	Power on indicator	Red LED	Green LED

Housing	Chassis & Cover	plastic	
	Color	Dark gray	
	Installation	Magnetic base for unrestricted installation	

Cable	Cable Length	TH sensor w/ 2m cable ( standard ) TH sensor w/ 4m cable ( option )	T sensor w/ 2m cable ( standard ) T sensor w/ 4m cable ( option )
	Cable Specification	4-wired 3.5mm to RJ11	
	Cable Color	Black	Beige

Environmental	Operating	0 to 80°C Degree
	Storage	-5 to 80°C Degree
	Humidity	0~100%, non-condensing

Dimensions	Product	30L x 25Wx 18H mm
------------	---------	-------------------

Weight	Net	10g
--------	-----	-----

Compatibility	InfraPower	W / WS / Wi / WSi series PDU
	InfraSolution	X-2000 series
	InfraGuard	Cabinet sensor system

Safety Regulatory	FCC & CE certified	
-------------------	--------------------	--


Environmental	RoHS2 & REACH compliant	
---------------	-------------------------	--

## < 1.5 > IP Dongle Installation & Connection

### IP Dongle Access to 16 PDU Levels

Patented IP Dongle provides IP remote access to the PDUs by a true network IP address chain. Only 1 x IP dongle allows access to max. 16 PDUs in daisy chain - which is a highly efficient application for saving not only the IP remote accessories cost, but also the true IP addresses required on the PDU management.

Hot-Pluggable design facilitates the IP dongle installation. Simply integrate the IP Dongle to the 1st PDU, then the entire daisy chain group can be remote over IP. Hence, administrator can remotely access all PDUs in the daisy chain group by one single IP via the IP Dongle.

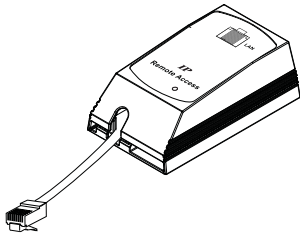


#### IP dongle for vertical PDU


Model :  
IPD-02-S ( with SNMP feature )

Vertical IP dongle installation steps :

- slide the IP dongle on the plate above the meter
- plug the RJ-45 connector of IP dongle into the LINK port of the **1st level PDU** meter
- use the CAT. 5 / 6 cable to connect IP dongle to network device

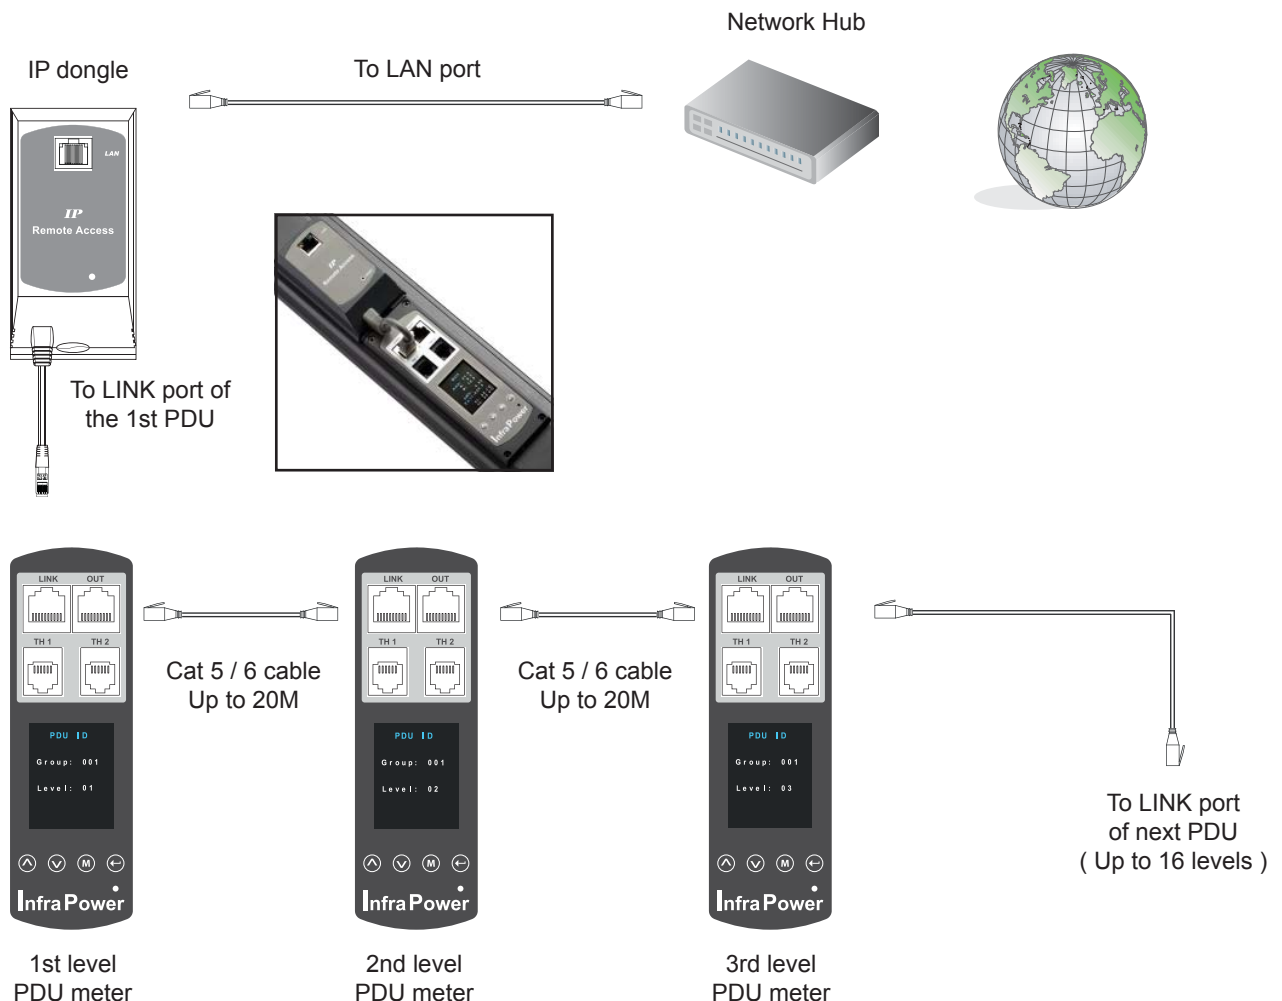

## < 1.5 > IP Dongle Installation & Connection

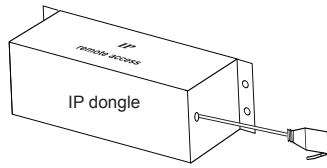


### IP dongle for rackmount PDU

Model :  
IPD-H02-S ( with SNMP feature )

#### Horizontal IP dongle installation steps :

- fix the IP dongle on the rear side of rackmount PDU with 4 screws
- plug the RJ-45 connector of IP dongle into the LINK port of the 1st level PDU meter
- use the CAT. 5 / 6 cable to connect IP dongle to network device

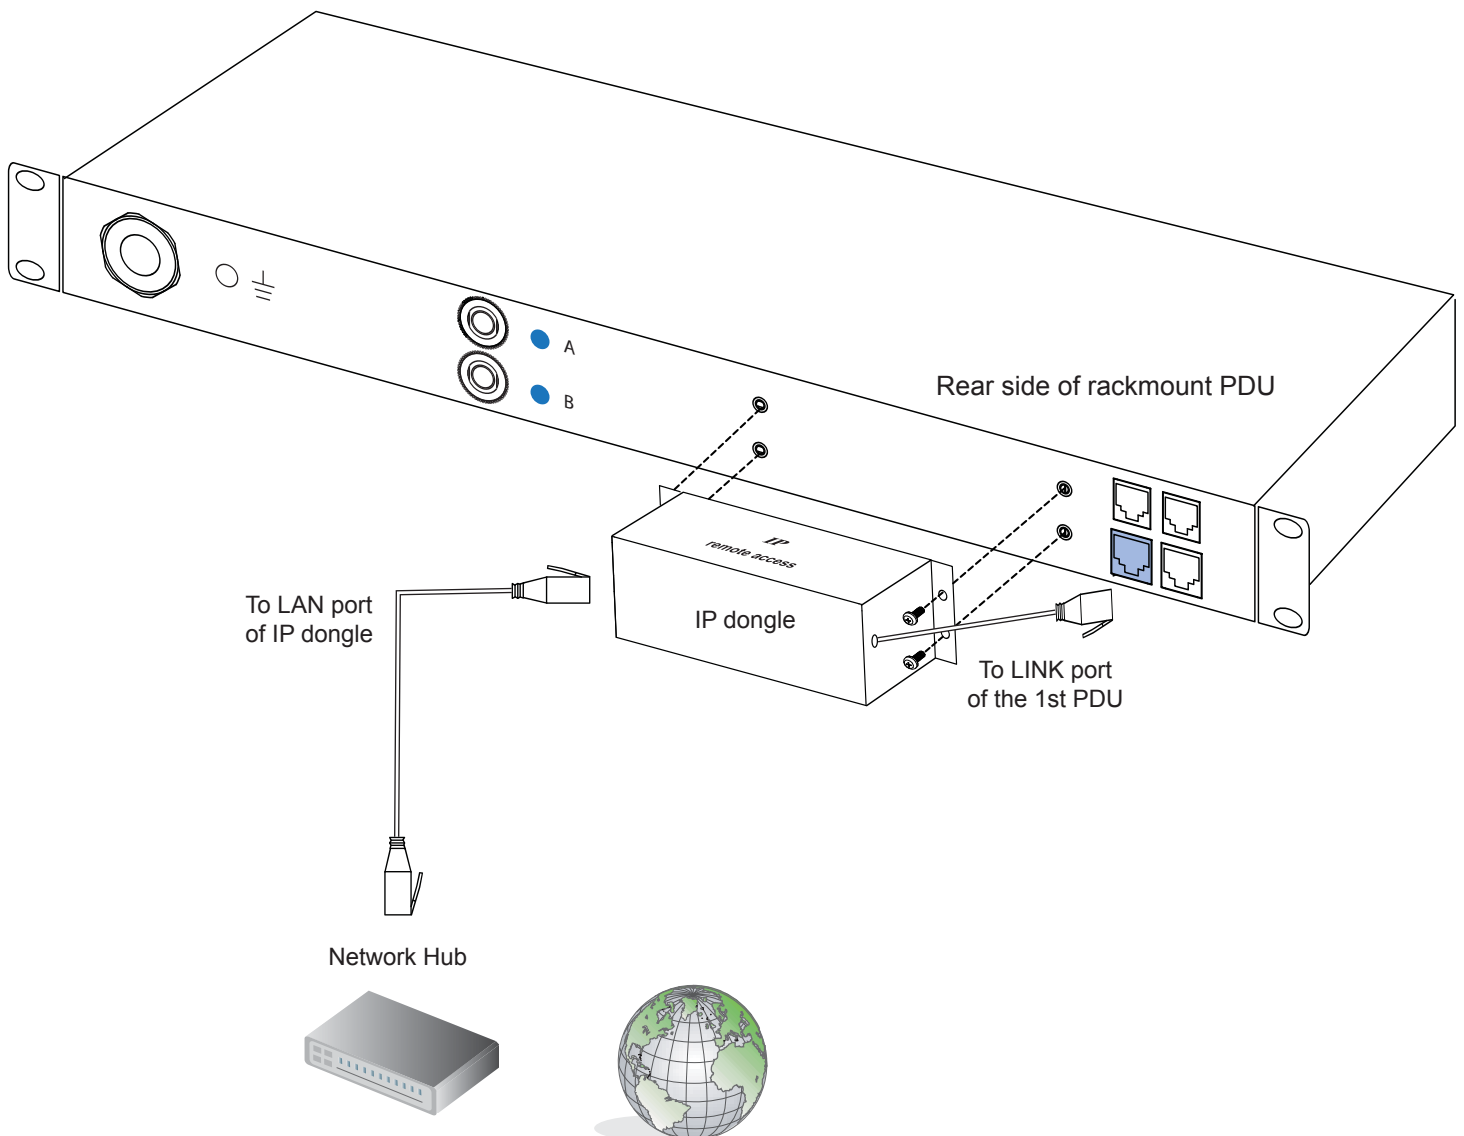


## < 1.6 > Easy Change on PDU Power Feed Position

### Power Feed Entry Flexibility - By Meter Setting


Customization of top feed power entry is available on request.

The change of the power feed entry position is possible after installation. The W series meter provides the flexibility to simply turnover on top feed PDUs with the use of meter inversion buttons and an alternative membrane.

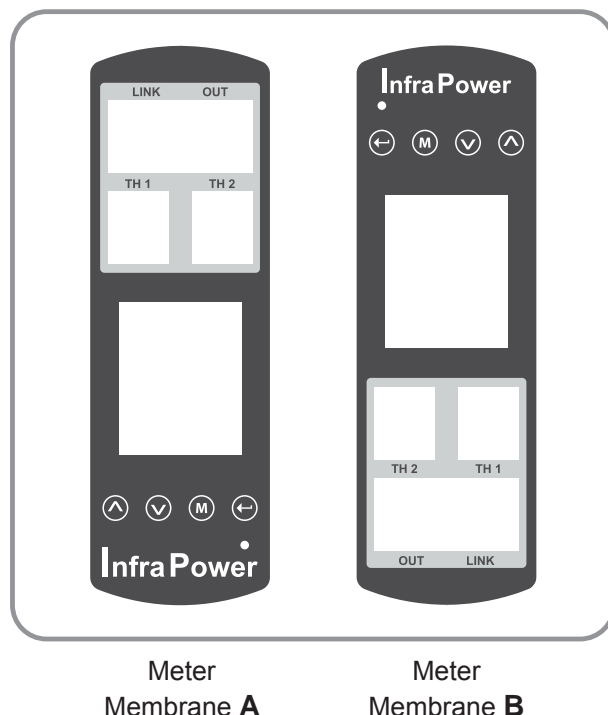

Meter  
Membrane A

Meter  
Membrane B

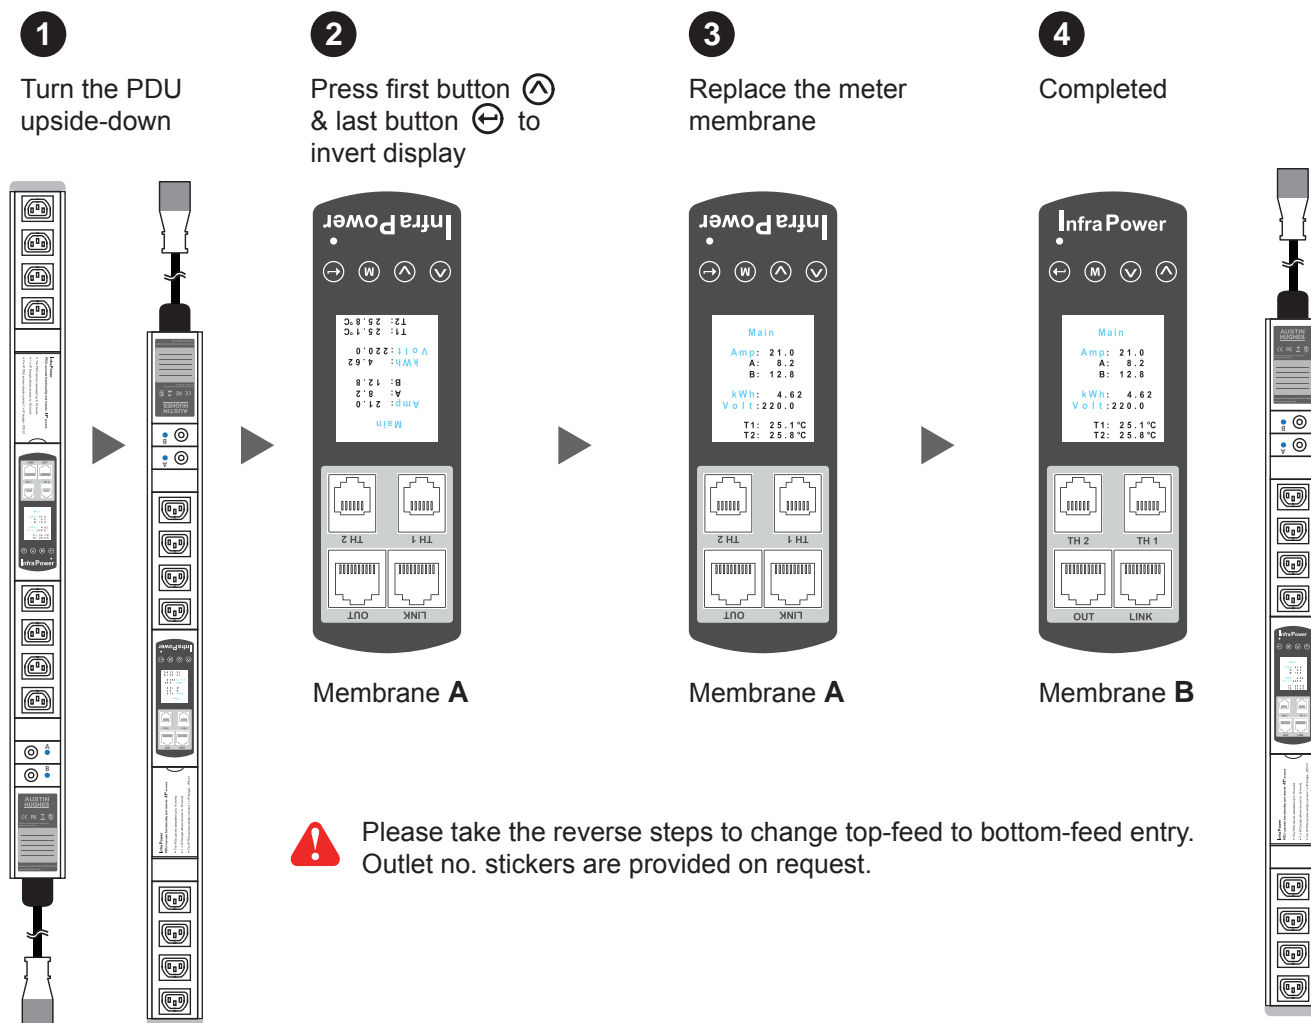

## Part II. Software

### < 2.1 > Key Features

InfraPower Manger IPM-03 is a free PDU mangement software to remote & monitor up to 30 IP dongle group ( max. 16 PDU levels in each IP dongle group ), total 480 PDUs

5 concurrent user access are bundled for achieving the demand of multi-user / multi-tasking in nowadays' time-sharing date center operation.

#### InfraPower IPM-03


Features		
Capacity	IP Dongle Group (Just 1 for 16 PDU levels)	30
	PDU number	480
	Concurrent Users	5
Enhanced Features	Outlet Level kWh & Amp Measurement	✓
	Outlet Scheduling	✓
	Energy Consumption (kWh) Monitoring	✓
	Apparent Power (kVA) Monitoring	✓
	Power Factor Measurement	✓
	Circuit Breaker Monitoring	✓
	SNMP Capability via IP Dongle	✓
Basic Features	Aggregate Current (Amp) Monitoring	✓
	Individual Outlet Switch ON/OFF	✓
	Temp-Humid Monitoring	✓
	Alarm Threshold Setting	✓
	Rising Alert Threshold Setting	✓
	Remote Access via Web	✓
	Graphic User Interface	✓
	Reporting	✓
PDU Series Support	WSi / Wi (Outlet Measurement)	✓
	WS / W	✓



## < 2.2 > IP Dongle Configuration

After the completion of IP dongle connection, please take the following steps to configure the IP dongle :

- Step 1.** Prepare a notebook computer to download the IP setup utilities from the link :  
<http://www.austin-hughes.com/support/utilities/infrapower/IPdongleSetup.msi>
- Step 2.** Double Click the IPDongleSetup.msi and follow the instruction to complete the installation
- Step 3.** Go to each first level PDU with the notebook computer & a piece of CAT. 5 / 6 cable to configure the IP dongle by IP setup utilities as below. Please take the procedure for all IP dongles **ONE BY ONE**

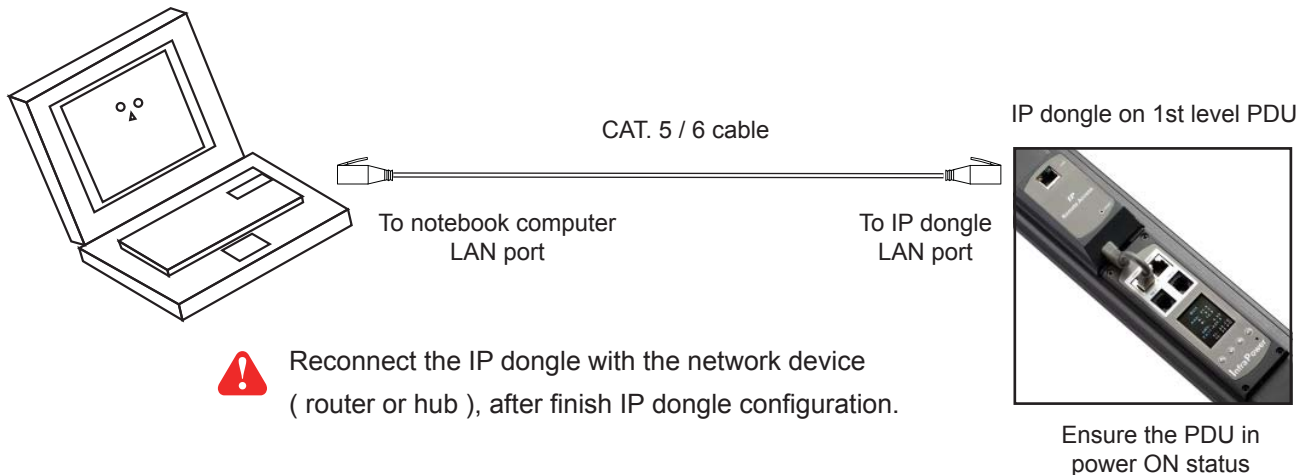

IP setup utilities for IP Dongle (Ver. Q411V1)

InfraPower® Intelligent Remote Power Management

IP Dongle list

Device MAC address: 00:0D:5D:05:8C:1A

Scan

Configuration

Name: Name

Location: Rack\_001

Password:

New password:

Confirm new password:

IP address: 192.168.0.1

Subnet mask: 255.255.255.0

Gateway: 192.168.0.254

Save

Close

Write down the new IP address & password for < Setup > purpose, refer to P.20

- Step 4.** Click “ **Scan** ” to search the connected IP dongle
- Step 5.** Enter device name in “ **Name** ” ( min. 4 char. / max. 16 char. ). Default is “ **Name** ”
- Step 6.** Enter device location in “ **Location** ” ( min. 4 char. / max. 16 char. ). Default is “ **Rack\_001** ”
- Step 7.** Enter password in “ **Password** ” for authentication ( min. 8 char. / max. 16 char. ) Default is “ **00000000** ”
- Step 8.** Enter new password in “ **New password** ” ( min. 8 char. / max. 16 char. )
- Step 9.** Re-enter new password in “ **Confirm new password** ”
- Step 10.** Change the desired “ **IP address** ” / “ **Subnet mask** ” / “ **Gateway** ”, then Click “ **Save** ” to confirm the changes
- The default IP setting is as below:
- |               |               |
|---------------|---------------|
| IP address :  | 192.168.0.1   |
| Subnet mask : | 255.255.255.0 |
| Gateway :     | 192.168.0.254 |

## < 2.3 > Hardware Requirements of the Management PC

Please prepare a management PC with the hardware requirements as below for InfraPower Manager - IPM-03

### Recommended hardware requirements :

- Processor: Dual Core 2GHz or above
- Memory: 2GB RAM
- Available Disk Space: 500GB
- Drive: DVD ROM drive
- Display: 1440 x 900 or higher resolution monitor



- The default service port of web server is 80.
- A dedicated PC to run InfraPower Manager - IPM-03 is recommended.
- Make sure the management PC is POWER ON & IPM-03 is under operation.  
Otherwise, daily data backup will NOT be proceeded.

## < 2.4 > Supported OS Platform & Language

InfraPower Manager – IPM-03 supports the OS platforms & languages as below:


- MS Windows XP Professional with SP3 (32bit only)
- MS Windows 7 Professional with SP1
- MS Windows 7 Ultimate with SP1
- MS Windows Server 2003 R2 Standard Edition with SP2
- MS Windows Server 2008 Standard Edition SP2
- MS Windows Server 2008 R2 Standard Edition SP1



**Ensure the user logs in the management PC as a member of “Administrators” Group before IPM-03 Installation and execution.**

User can select the following languages under Control Panel > Region and Language in English Edition OS:

- 1) Arabic (Saudi Arabia)
- 2) Chinese (Traditional, Hong Kong S.A.R.)
- 3) Dutch (Netherlands)
- 4) English (Australia)
- 5) English (United Kingdom)
- 6) English (United States)
- 7) French (France)
- 8) German (Germany)
- 9) German (Switzerland)
- 10) Italian (Italy)
- 11) Japanese (Japan)
- 12) Korean (Korea)
- 13) Norwegian (Norway)
- 14) Portuguese (Portugal)
- 15) Russian (Russia)
- 16) Spanish (Spain)
- 17) Turkish (Turkey)

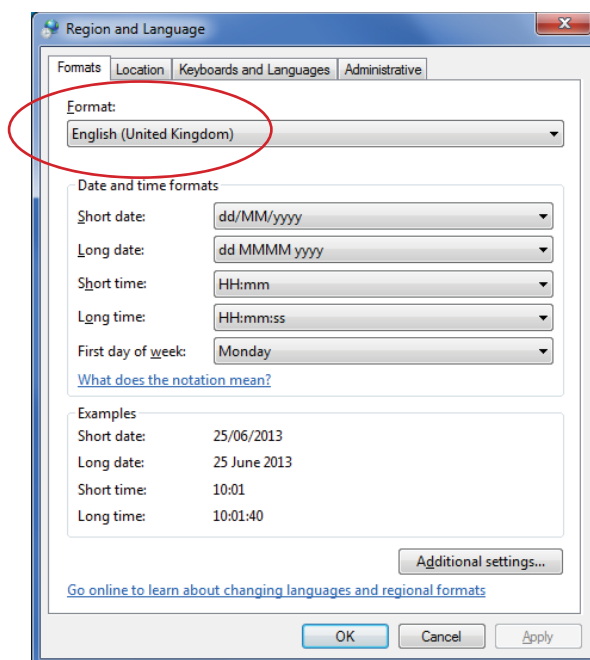

## < 2.5 > Software Download

InfraPower Manager, IPM-03, is a **PDU** management software to enhance the features and benefits of the W kWh Monitored / Wi Outlet kWh Monitored / WS kWh Switched / WSi Outlet kWh Switched PDUs by providing a centralized and remote management platform, and total reporting with detailed logs & event occurrences.

InfraPower Manager IPM-03 can support max. 5 concurrent login users and manage multi- IP dongles max. 30, hence the concurrent login users can access & remote PDUs max. 480 ( 30 IP dongles x 16 level PDUs ).



### Software download

Please download the InfraPower Manager - IPM-03 to the management PC

from the link <http://www.austin-hughes.com/support/software/infrapower/IPM-03.msi>

Double click the IPM-03.msi and follow the instruction to complete the installation.




IPM-03.msi



↓  
click “ **Next** ”

↓  
click “ **Install** ”

↓  
click “ **Finish** ”

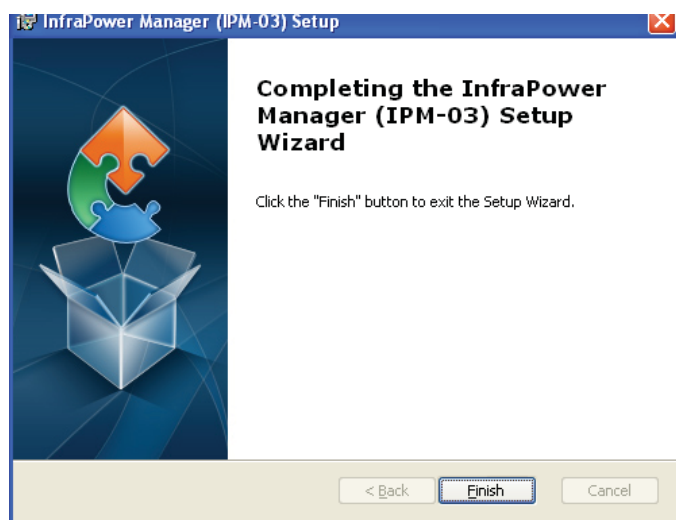

..... • **Complete**

## < 2.6 > First Time Start-up Setting


**Step 1.** Double Click the **InfraPower Manager - IPM-03**  
and follow the instruction to complete start-up setting.



**!** For MS Windows 7 and MS Windows server 2008,

it requires to run a program with administrator rights before execution:

- Right click **InfraPower Manager - IPM-03** , and then select **Properties**.
- Click the **Compatibility** tab.
- Tick the box **Run this program as an administrator**, and then click OK.

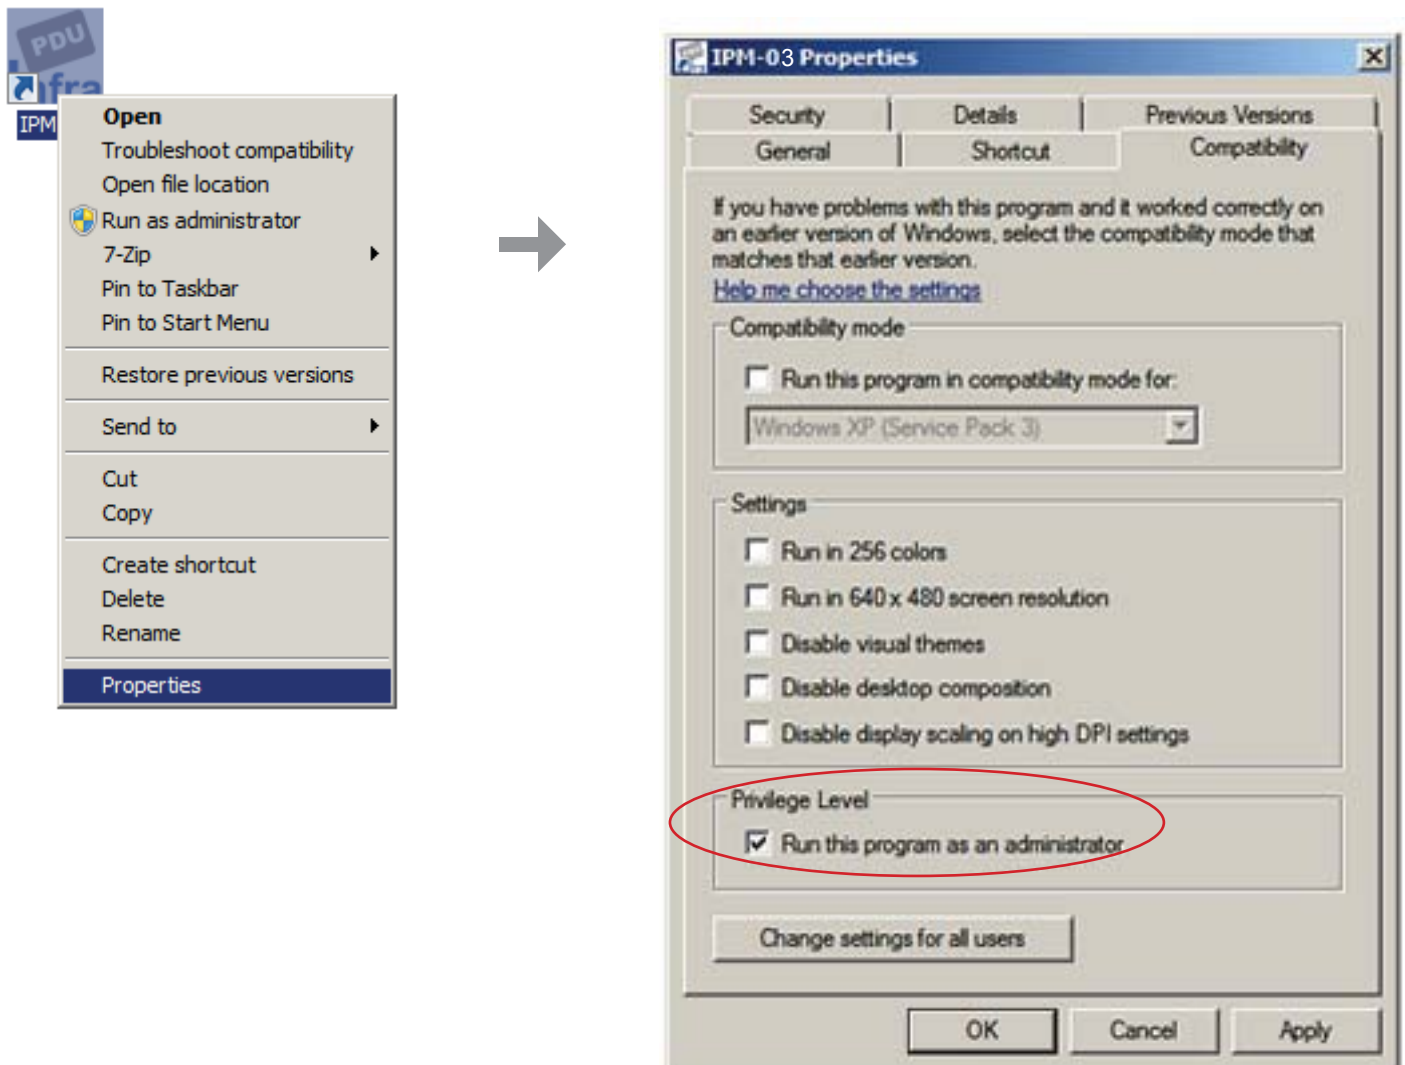

## < 2.6 > First Time Start-up Setting

**Step 2.** Click “ Next “ in “ InfraPower Manager start-up setting “ box

**Step 3.** Input the fields of the following window & Click “ Install “

**Software component(s) analysis & installation**

The following 3 software component(s) are required to run InfraPower Manager .

( 1 ) Apache 2.2 Please decide to use the existing or new Apache 2.2.

☐ Use existing Apache  
( Tick this if the management PC has been already installed Apache )

☒ Install new Apache 2.2

Folder : C:\AppServ\

Port : 80

( 2 ) PHP 5 Please decide to use the existing or new PHP 5.

☐ Use existing PHP  
( Tick this if the management PC has been already installed PHP )

☒ Install new PHP 5

Folder : C:\AppServ\

( 3 ) PostgreSQL 9.0 Please decide to use the existing or new PostgreSQL 9.0.

☐ Use existing PostgreSQL  
( Tick this if the management PC has been already installed PostgreSQL )

☒ Install new PostgreSQL 9.0


Folder : C:\Program Files\PostgreSQL\9\

PostgreSQL login : postgres

PostgreSQL password : 1qaz2WSX

Install Cancel

--If the port of web server is not 80, please input the appropriate no. here and follow the instruction in “ Change port no. of web server “ next page to make the change effective.

-  PostgreSQL password can be changed by user.  
The password **MUST** contain at least three of the following four character groups:
- English uppercase characters ( A through Z )
  - English lowercase characters ( a through z )
  - Numerals ( 0 through 9 )
  - Non-alphabetic characters ( such as !, \$, #, % )

..... • Complete


## < 2.7 > Change Port no. of Web Server

### Change port no. of web server.

If users want to use another port no. instead of 80, please take the following steps after  
InfraPower Manager IPM-03 “ **First time start-up setting** ” is completed.

**Step 1.** Go to the path of web server being installed. ( Default: C:\AppServ\Apache2.2\conf\ )

**Step 2.** Open “ **httpd.conf** ” & change “ **Listen 80** ” to “ **Listen xx** ” where xx means the port users want to use save the change

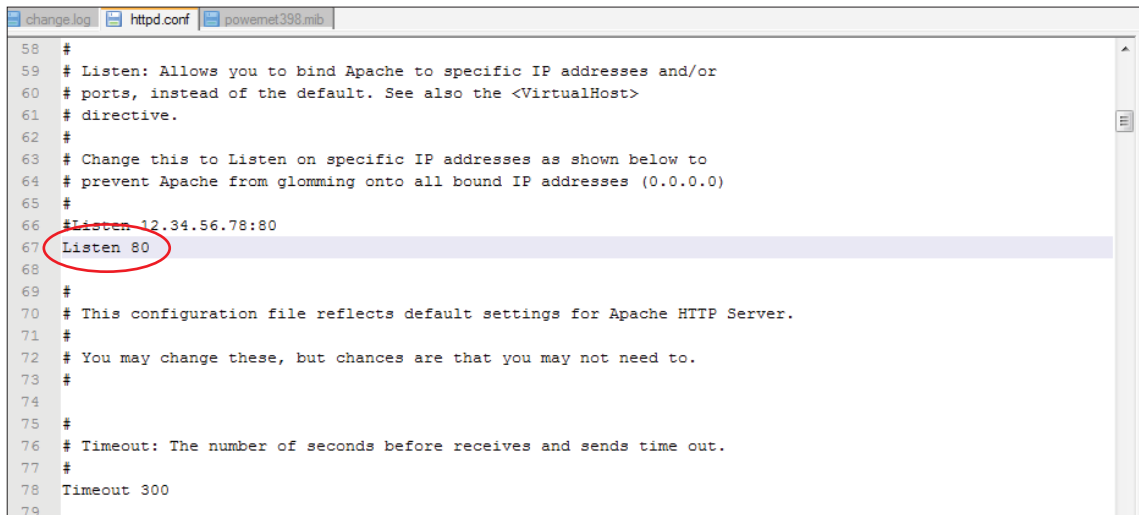

```
58 #
59 # Listen: Allows you to bind Apache to specific IP addresses and/or
60 # ports, instead of the default. See also the <VirtualHost>
61 # directive.
62 #
63 # Change this to Listen on specific IP addresses as shown below to
64 # prevent Apache from glomming onto all bound IP addresses (0.0.0.0)
65 #
66 #Listen 12.34.56.78:80
67 Listen 80
68 #
69 #
70 # This configuration file reflects default settings for Apache HTTP Server.
71 #
72 # You may change these, but chances are that you may not need to.
73 #
74 #
75 #
76 # Timeout: The number of seconds before receives and sends time out.
77 #
78 Timeout 300
79
```

**Step 3.** Restart Apache services.

Go to Control Panel > Administrative Tools > Services > Apache2.2 & Click “ **Restart** ”

..... **Complete**

## Part III. System Setup & Remote Access

### < 3.1 > System setup

Users can follow below step 1 - 3 to access the management PC and InfraPower Manager IPM-03

**Step 1.** Open Internet Explorer ( I.E. ), version 8.0 or above


**Step 2.** Enter the URL of management PC into the address bar

⚠ ( If fail to access, please ask MIS to check if the port for web server is enable.  
Default port : 80 )


e.g. <http://192.168.0.1/IPM-03/>

**Step 3.** Enter “ **User name** “. Default is “ **admin** “

Enter “ **Password** “. Default is “ **00000000** “

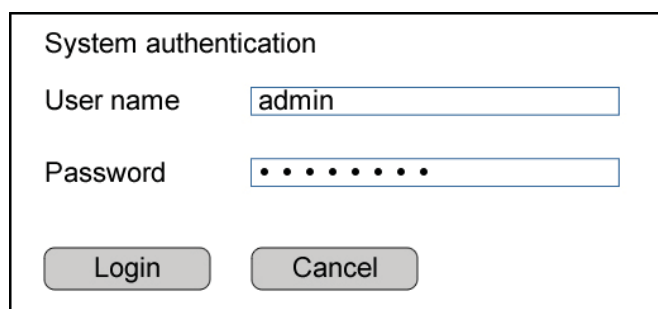

A screenshot of a 'System authentication' dialog box. It contains two input fields: 'User name' with the text 'admin' and 'Password' with ten dots. Below the fields are two buttons: 'Login' and 'Cancel'.

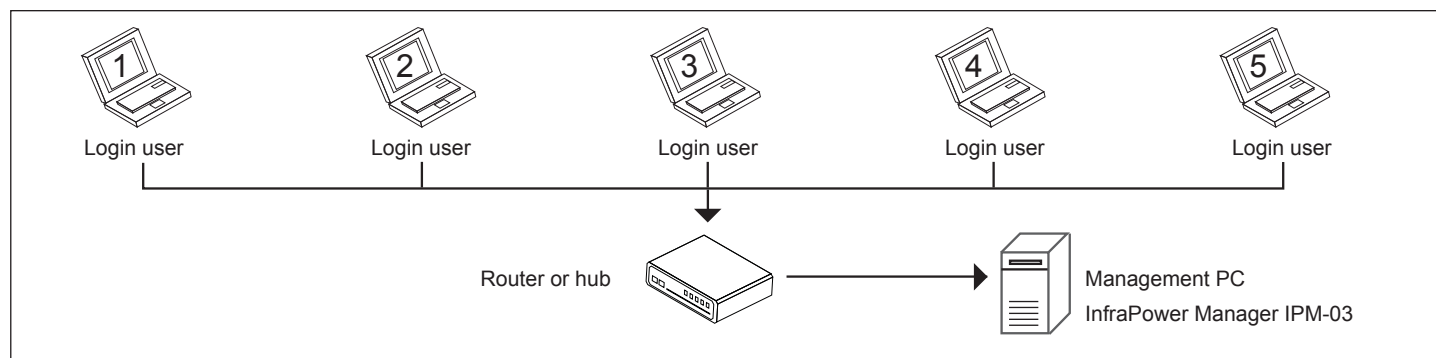

Then users should go to < **User** >, < **Setup** >, < **Alarm** >, < **General** > & < **Backup** > for initial system setup

⚠ Only Administrator is authorised to access < **User** >, < **Setup** >, < **Alarm** >, < **General** > & < **Backup** >

## < 3.1 > System setup

In < **User** > page, administrator can create 4 more operators.

**Step 1.** Tick “ **Operator 1:** “

**Step 2.** Input “ **User name** “ & “ **User login password** “

**Step 3.** Input user login password in “ **Confirm password** “ again

**Step 4.** Repeat Step 1 to 3 for other operators if necessary

**Step 5.** Click “ **Apply** “ to finish the user setup

**User setup**

	Activate	User name	User login password	Confirm password
Administrator :	<input checked="" type="checkbox"/>	<input type="text" value="admin"/>	<input type="password" value="....."/>	<input type="password" value="....."/>
<ul style="list-style-type: none"><li>• Only administrator is authorised to access <b>SYSTEM SETTING</b>.</li><li>• Only administrator is authorised to set and change all users' password.</li><li>• Min. 4 char. and max. 16 char. for user name.</li><li>• Min. 8 char. and max. 16 char. for user login password.</li><li>• If there is any change of user name, system will automatically delete the original operator and create a new one. A new user login password is required.</li></ul>				
Operator 01 :	<input checked="" type="checkbox"/>	<input type="text" value="Kenny.Wong"/>	<input type="password" value="....."/>	<input type="password" value="....."/>
Operator 02 :	<input checked="" type="checkbox"/>	<input type="text" value="William.Wong"/>	<input type="password" value="....."/>	<input type="password" value="....."/>
Operator 03 :	<input type="checkbox"/>	<input type="text"/>	<input type="password"/>	<input type="password"/>
Operator 04 :	<input type="checkbox"/>	<input type="text"/>	<input type="password"/>	<input type="password"/>
<div><input type="button" value="Apply"/> <input type="button" value="Cancel"/></div>				



## < 3.1 > System setup

In < **Setup** > page, administrator can activate max. 30 IP dongle groups & set the group command password

**Step 1.** “ **Activate** “ IP dongle group 01

**Step 2.** Input “ **IP address** “ & “ **password** “ of the IP dongle

**Step 3.** “ **Enable** “ Command password

**Step 4.** Input “ **New command password** “. Default is “ **00000000** “

**Step 5.** Input new command password in “ **Confirm new password** “ again.

**Step 6.** Click “ **Apply** “ to finish the IP dongle group setup

**Step 7.** Repeat step 1 to 6 for other IP dongle groups if necessary

IP dongle groups

01	02	03	04	05	06	07	08	09	10	11	12	13	14	15
16	17	18	19	20	21	22	23	24	25	26	27	28	29	30

\* Initially, please setup the IP dongle one by one.

IP dongle group 01 :

☒ Activate ☐ Deactivate

- DO NOT activate the group if there is no any IP dongle and PDU connection.
- Each IP dongle group consist of one IP dongle and max. 16 PDU.

01 IP dongle setting

IP dongle address :  
IP dongle password :

- If the administrator wants to change IP dongle address and password, two steps are required.
- Firstly, enter the IP Setup utilities to make the change. ( ref. to User Manual < 2.2 > )
- Secondly, return to this page to make the same change on IP address and password.

01 IP dongle group

Command password :

☐ Enable ☒ Disable

New command password :  
Confirm new password :

- Administrator needs to set command password for IP dongle groups one by one.
- Command password required for any PDU configuration and control.
- Administrator can set different command password for different IP dongle group or all IP dongle groups share the same password.

Apply

Cancel

## < 3.1 > System setup

In < **Alarm** > , administrator can configure the alarm email server & max. 5 email recipients to receive alarm notifications from the software

**Step 1.** “ **Enable** ” alarm email

**Step 2.** Input “ **SMTP server** ” , “ **SMTP port** ”

**Step 3.** Input sender email account in “ **User email** ”

**Step 4.** Input sender name in “ **User name** ” ( min. 4 char / max. 256 char )

**Step 5.** Input sender email account password in “ **Password** ” ( min. 0 char / max. 16 char )

**Step 6.** Input the “ **Alarm interval** ”

**Step 7.** Input the alarm recipient email account in “ **Email address 01** ”

**Step 8.** Repeat step 7 from other alarm recipients if necessary

**Step 9.** Click “ **Apply** ” to finish the alarm email server settings

### Alarm email server setting

Alarm email :

☒ Enable ☐ Disable

SMTP server :

SMTP port :

User email :

User name :

Password :

Alarm interval :

( Min. 10, Max. 60 minutes )

Alarm email to

Alarm mail recipient 01 :

Alarm mail recipient 02 :

Alarm mail recipient 03 :

Alarm mail recipient 04 :

Alarm mail recipient 05 :

Apply

Cancel

This alarm setting is for all IP dongle PDU groups.

## < 3.1 > System setup

In < **General** > , administrator can change the “ **Refresh rate** “ , “ **Scan rate** “ & “ **Temperature unit** “ across all IP dongle groups

**Auto data refresh**  
Refresh rate :  ( Min. 10, Max. 60 seconds )

- Auto data refresh rate on the page of **PDU STATUS**, **PDU DETAILS** and **TH STATUS**.

**IP dongle groups auto scan**  
Scan rate :  ( Min. 5, Max. 60 seconds )

- Auto scan rate on the page of **PDU STATUS** and **TH STATUS**.

**Temperature unit**  
Unit : ☐ °C ☒ °F

In < **Backup** > , administrator can “ **Enable** “ or “ **Disable** “ the daily data backup. When “ **Enable** “, the backup path can be changed

**Data backup setting**  
Daily backup : ☒ Enable ☐ Disable  
Backup to :   
Example : C:\Program Files\IPM\

- Daily backup proceeded at 00:00 for last 24 hours data.
- The backup data for **PDU LOG**, **Outlet LOG**, **TH LOG**, **DAILY KWH LOG**, **EVENT**, **SYS LOG** saved in CSV file format.
- Folder  will be automatically created under the path you entered.



## < 3.2 > Remote Access

After administrator completes < System Setup >, up to 4 additional users can access the management PC remotely. User can follow the steps below to access management PC &

InfraPower Manager IPM-03

**Step 1.** Add the port of web server in the firewall settings of the management PC.

- Open “ **Control Panel** ”
- Select “ **Windows Firewall** ”
- Select “ **Advanced settings** ”
- Right Click “ **Inbound Rules** ” & select “ **New Rule...** ”
- Select “ **Port** ” & Click “ **Next>** ”
- Select “ **TCP** ” then “ **All local ports** ” & Click “ **Next>** ”
- Select “ **Allow the connection** ” & Click “ **Next>** ”
- Tick all three options & Click “ **Next>** ”
- Input the “ **Name** ” & “ **Description** ” of the port & Click “ **Finish** ”

**Step 2.** Open the web browser of remote client PC

**Step 3.** Input the URL of InfraPower Manager IPM-03 in the address bar

e.g. <http://192.168.0.1/IPM-03/>



If the port no. of web server is not 80, please enter the appropriate port no. follow the IP address e.g. <http://192.168.0.1:81/IPM-03/>

**Step 4.** System authentication page pops up automatically.

Input “ **User name** ”, “ **Password** ” & Click “ **Login** ”

System authentication

User name

Password

Part IV. Software Usage & Operation

< Status > provides

- < Search > function to search new installed PDUs in each IP dongle group. The real time clock of the PDUs will be synchronized from the management PC during searching process
- Scan function to monitor the PDUs' status of each IP dongle group **ONE by ONE**

IP dongle groups

010203040506070809101112131415

161718192021222324252627282930

Scan

Stop

PDU status

IP dongle name : default\_ipd\_name

IP address : 192.168.1.87

Level	Name	Location	Circuit A		Circuit B		Total		TH 1		TH 2	
			Amp		Amp		Amp		°C		°C	
			Max. / Load / Alarm / R. alert / L. alert		Max. / Load / Alarm / R. alert / L. alert		Load					
01	WSI24-32A	Server_Rack_001	16	/ 0.0 / 13.0 / 0.0 / 0.0	16	/ 0.0 / 13.0 / 0.0 / 0.0	0.0	1.09	24.8	43.3	-	-
02	WSI24-32A	Server_Rack_002	16	/ 0.0 / 13.0 / 0.0 / 0.0	16	/ 0.0 / 13.0 / 0.0 / 0.0	0.0	0.05	-	-	-	-
03	WSI24-32A	Server_Rack_003	16	/ 0.0 / 13.0 / 0.0 / 0.0	16	/ 0.0 / 13.0 / 0.0 / 0.0	0.0	0.06	-	-	-	-
04	WSI24-32A	Server_Rack_004	16	/ 0.0 / 13.0 / 0.0 / 0.0	16	/ 0.0 / 13.0 / 0.0 / 0.0	0.0	0.00	-	-	-	-
05	Wi16-32A	Server_Rack_005	16	/ 0.0 / 13.0 / 0.0 / 0.0	16	/ 0.0 / 13.0 / 0.0 / 0.0	0.0	0.45	-	-	-	-
06	Wi16-32A	Server_Rack_006	16	/ 0.0 / 13.0 / 0.0 / 0.0	16	/ 0.0 / 13.0 / 0.0 / 0.0	0.0	0.00	-	-	-	-
07	Wi16-32A	Server_Rack_007	16	/ 0.0 / 13.0 / 0.0 / 0.0	16	/ 0.0 / 13.0 / 0.0 / 0.0	0.0	0.00	-	-	-	-
08	Wi16-32A	Server_Rack_008	16	/ 0.0 / 13.0 / 0.0 / 0.0	16	/ 0.0 / 13.0 / 0.0 / 0.0	0.0	0.00	-	-	-	-
09	WSI20-32A	Server_Rack_009	16	/ 0.0 / 13.0 / 0.0 / 0.0	16	/ 0.0 / 13.0 / 0.0 / 0.0	0.0	1.09	24.9	43.3	-	-
10	WSI20-32A	Server_Rack_010	16	/ 0.0 / 13.0 / 0.0 / 0.0	16	/ 0.0 / 13.0 / 0.0 / 0.0	0.0	0.05	-	-	-	-
11	WSI20-32A	Server_Rack_011	16	/ 0.0 / 13.0 / 0.0 / 0.0	16	/ 0.0 / 13.0 / 0.0 / 0.0	0.0	0.06	-	-	-	-
12	WSI20-32A	Server_Rack_012	16	/ 0.0 / 13.0 / 0.0 / 0.0	16	/ 0.0 / 13.0 / 0.0 / 0.0	0.0	0.00	-	-	-	-
13	Wi20-32A	Server_Rack_013	16	/ 0.0 / 13.0 / 0.0 / 0.0	16	/ 0.0 / 13.0 / 0.0 / 0.0	0.0	0.45	-	-	-	-
14	Wi20-32A	Server_Rack_014	16	/ 0.0 / 13.0 / 0.0 / 0.0	16	/ 0.0 / 13.0 / 0.0 / 0.0	0.0	0.00	-	-	-	-
15	Wi20-32A	Server_Rack_015	16	/ 0.0 / 13.0 / 0.0 / 0.0	16	/ 0.0 / 13.0 / 0.0 / 0.0	0.0	0.00	-	-	-	-
16	Wi20-32A	Server_Rack_016	16	/ 0.0 / 13.0 / 0.0 / 0.0	16	/ 0.0 / 13.0 / 0.0 / 0.0	0.0	0.00	-	-	-	-

☒ Auto data refresh :

Untick during data input

Search

Search new installed PDUs

\* Press F11 to enlarge or diminish the screen

## Part IV. Software Usage & Operation

In **< Details >**,

- Change “ **Name** ” and “ **Location** ” of PDU & Click “ **Apply** ”
- Change “ **Alarm amp.** ”, “ **Rising alert amp.** ” & “ **Low alert amp.** ” of PDU’s circuits & Click “ **Apply** ”
- Click “ **Reset** ” to reset peak amp. or kWh of PDU’s circuits
- Click “ **ON / OFF** ” to switch ON / OFF outlet  
( WS kWh Switched and WSi Outlet kWh Switched PDU only )
- View On / Off status of each PDU’s outlet
- View aggregated current on the PDU
- View lastest loading & energy consumption of each PDU’s outlet  
( Wi kWh Monitored & WSi Outlet kWh Switched PDU only )

IP dongle groups

010203040506070809101112131415

161718192021222324252627282930

PDU details

Level : 01 V24C13-32A-WSi

Status : Connected

Name : WSi20-32A

Location : Server\_Rack\_009

PDU kWh : 1.09

PDU load amp : 0.0

Power factor : 0.05

Apparent power (kVA) : 0.00

Circuit A

Max. amp : 16

Alarm amp : 13.0

Load amp : 0.0

Rising alert amp : 0.0

Low alert amp : 0.0

Peak amp : 8.2

2013/12/18 12:26:27

Reset

kWh : 0.28

2013/09/20 13:50:05

Reset

Circuit B

Max. amp : 16

Alarm amp : 13.0

Load amp : 0.0

Rising alert amp : 0.0

Low alert amp : 0.0

Peak amp : 2.6

2013/10/23 12:11:56

Reset

kWh : 0.81

2013/09/20 13:50:24

Reset

Outlet

Name

Amp

kWh

Status

Switch

Load / Alarm / R. alert / L. alert

0.0 / 16.0 / 5.0 / 0.0

0.00

ON

OFF

01

IBM\_Server\_1

0.0 / 16.0 / 5.0 / 0.0

0.00

ON

OFF

02

IBM\_Server\_2

0.0 / 10.0 / 0.0 / 0.0

0.00

ON

OFF

03

IBM\_Server\_3

0.0 / 10.0 / 0.0 / 0.0

0.00

ON

OFF

04

IBM\_Server\_4

0.0 / 10.0 / 0.0 / 0.0

0.00

ON

OFF

05

IBM\_Server\_5

0.0 / 10.0 / 0.0 / 0.0

0.00

ON

OFF

06

IBM\_Server\_6

0.0 / 10.0 / 0.0 / 0.0

0.00

ON

OFF

07

HP\_Server\_1

0.0 / 10.0 / 0.0 / 0.0

0.00

ON

OFF

08

HP\_Server\_2

0.0 / 8.0 / 4.0 / 0.0

0.28

ON

OFF

09

HP\_Server\_3

0.0 / 5.0 / 4.0 / 0.0

0.02

ON

OFF

10

HP\_Server\_4

0.0 / 10.0 / 0.0 / 0.0

0.01

ON

OFF

11

HP\_Server\_5

0.0 / 5.0 / 0.0 / 0.0

0.02

ON

OFF

12

HP\_Server\_6

0.0 / 8.0 / 3.0 / 0.0

0.05

ON

OFF

Click outlet icon for setting

Outlet

Name

Amp

kWh

Status

Switch

Load / Alarm / R. alert / L. alert

0.0 / 5.0 / 3.0 / 0.0

0.08

ON

OFF

13

Dell\_Server\_1

0.0 / 5.0 / 3.0 / 0.0

0.08

ON

OFF

14

Dell\_Server\_2

0.0 / 5.0 / 0.0 / 0.0

0.02

ON

OFF

15

Dell\_Server\_3

0.0 / 5.0 / 0.0 / 0.0

0.01

ON

OFF

16

Dell\_Server\_4

0.0 / 5.0 / 0.0 / 0.0

0.04

ON

OFF

17

Dell\_Server\_5

0.0 / 5.0 / 0.0 / 0.0

0.04

ON

OFF

18

Dell\_Server\_6

0.0 / 5.0 / 0.0 / 0.0

0.00

ON

OFF

19

Sun\_Server\_1

0.0 / 5.0 / 0.0 / 0.0

0.00

ON

OFF

20

Dell\_Server\_2

0.0 / 5.0 / 0.0 / 0.0

0.01

ON

OFF

21

Dell\_Server\_3

0.0 / 5.0 / 0.0 / 0.0

0.00

ON

OFF

22

Dell\_Server\_4

0.0 / 5.0 / 0.0 / 0.0

0.00

ON

OFF

23

Dell\_Server\_5

0.0 / 5.0 / 0.0 / 0.0

0.00

ON

OFF

24

Dell\_Server\_6

0.0 / 5.0 / 3.0 / 0.0

0.05

ON

OFF

Click outlet icon for setting

☒ Auto data refresh : 

00000000

 Untick during data input

Apply

Save new data

Cancel

Cancel new data input

Set maintenance

Set PDU in Maintenance mode

Disable monitoring

Stop monitoring removed PDU

All IPM communication to and from the PDU is stopped, notification to the user is stopped, and the PDU readings are "-".

\* Press F11 to enlarge or diminish the screen

## Part IV. Software Usage & Operation

In < **Outlet setting** > ,

- Change PDU's outlet name
- Change “ **Power up sequence delay** ” of PDU's outlet  
( WS kWh switched and WSi Outlet kWh Switched PDU only )
- Change “ **Alarm amp.** ” , “ **Rising alert amp.** ” & “ **Low alert amp.** ” of PDU's outlet  
( Wi kWh Monitored & WSi Outlet kWh Switched PDU only )



Click “ **Apply** ” to finish the above settings

- Click “ **Reset** ” to reset peak amp. or kWh of PDU's outlet  
( Wi kWh Monitored & WSi Outlet kWh Switched PDU only )


**IP dongle groups**

01	02	03	04	05	06	07	08	09	10	11	12	13	14	15
16	17	18	19	20	21	22	23	24	25	26	27	28	29	30

---

**Outlet setting**

PDU level :  V24C13-32A-WSi  
Stausts : Connected  
Name : WSi20-32A  
Location : Server\_Rack\_009

Outlet :  

Name :

Status : ON

Power up sequence delay :  ( Min. 1, Max. 10 seconds )

Load amp : 0.0  
Alarm amp :   
Rising alert amp :   
Low alert amp :

Peak amp :	0.0	2013/09/10 17:15:46	<input type="button" value="Reset"/>
kWh :	0.00	2013/09/10 17:16:05	<input type="button" value="Reset"/>

---


<input type="button" value="Apply"/>	Save new data	<input type="button" value="Exit"/>	Return to PDU DETAILS
<input type="button" value="Cancel"/>	Cancel new data input		



Part IV. Software Usage & Operation

In < TH status > ,

- View status, location, lastest reading & alarm setting of Temp. & Humid sensors connected to each PDU

 The GUI does not show the readings if the TH sensors are not installed & activated.

IP dongle groups

010203040506070809101112131415

161718192021222324252627282930

















Scan

Stop

TH status

IP dongle name : default\_ipd\_name

IP address : 192.168.1.87

PDU				TH 1			TH 2	
Level	Name	Setting	Location	Temp. / Alarm / R. alert	Humid./ Alarm / R. alert	Location	Temp. / Alarm / R. alert	Humid./ Alarm / R. alert
01	WSi24-32A		THSensor_1_loc.	25.0 / 35.0 / 30.0	43.3 / 65.0 / 60.0	-	- / - / -	- / - / -
02	WSi24-32A		-	- / - / -	- / - / -	-	- / - / -	- / - / -
03	WSi24-32A		-	- / - / -	- / - / -	-	- / - / -	- / - / -
04	WSi24-32A		-	- / - / -	- / - / -	-	- / - / -	- / - / -
05	Wi16-32A		-	- / - / -	- / - / -	-	- / - / -	- / - / -
06	Wi16-32A		-	- / - / -	- / - / -	-	- / - / -	- / - / -
07	Wi16-32A		-	- / - / -	- / - / -	-	- / - / -	- / - / -
08	Wi16-32A		-	- / - / -	- / - / -	-	- / - / -	- / - / -
09	WSi20-32A		THSensor_1_loc.	25.0 / 35.0 / 30.0	43.3 / 65.0 / 60.0	-	- / - / -	- / - / -
10	WSi20-32A		-	- / - / -	- / - / -	-	- / - / -	- / - / -
11	WSi20-32A		-	- / - / -	- / - / -	-	- / - / -	- / - / -
12	WSi20-32A		-	- / - / -	- / - / -	-	- / - / -	- / - / -
13	Wi20-32A		-	- / - / -	- / - / -	-	- / - / -	- / - / -
14	Wi20-32A		-	- / - / -	- / - / -	-	- / - / -	- / - / -
15	Wi20-32A		-	- / - / -	- / - / -	-	- / - / -	- / - / -
16	Wi20-32A		-	- / - / -	- / - / -	-	- / - / -	- / - / -

☒ Auto data refresh :

Untick during data input

Search

Search new installed PDUs

\* Press F11 to enlarge or diminish the screen

Part IV. Software Usage & Operation

In < TH setting > ,

- “ **Activate** ” or “ **Deactivate** ” Temp. & Humid sensors
- Change “ **Location** ” , “ **Rising alert Setting** ” & “ **Alarm Setting** ” of Temp. & Humid sensors
- Click “ **Apply** ” to finish the above settings

 The default TH setting is **Deactivate** .

- When install T or TH sensor, please tick **Activate** . Otherwise, no readings display.
- **DON'T** activate T or TH sensor if no sensor installed.

IP dongle groups

010203040506070809101112131415

161718192021222324252627282930

TH setting

PDU level : 01V24C13-32A-WSI

Stausts : Connected

Name : WSI20-32A

Location : Server\_Rack\_009

TH 1

☒ Activate☐ Deactivate

Locaton : THSensor\_1\_loc.

Alarm

Rising alert

Setting

Reading

Temp. ( °C ) :

Humid. ( % ) :

35.0

65.0

30.0

60.0

25.1

43.3

TH 2

☐ Activate☒ Deactivate

Locaton : -

Alarm

Rising alert

Setting

Reading

Temp. ( °C ) :

Humid. ( % ) :

-

-

-

-

-

-

DO NOT activate T or TH sensor if no sensor installed.

When install T or TH sensor, please tick activate. Otherwise, no readings display.

Apply

Save new data

Exit

Return to TH STATUS

Cancel

Cancel new data input









Part IV. Software Usage & Operation

< **Outlet Schedule Overview** > provides a scan overview on all settings of PDU's outlet schedules based on IP dongle group

Outlet schedule overview

IP dongle name : default\_ipd\_name  
IP address : 192.168.1.82

Page : 1 2

PDU		Setting	Outlet Schedule # 1 - 2		Outlet Schedule # 3 - 4		Outlet Schedule # 5 - 6	
Level	Name		Name	Action	Name	Action	Name	Action
01	WSi24-32A		ScheduleName_01	Daily - Off	-	Disabled	-	Disabled
			ScheduleName_02	Daily - Off	-	Disabled	-	Disabled
02	WSi20-13A		-	Disabled	-	Disabled	-	Disabled
			-	Disabled	-	Disabled	-	Disabled
03	W16-30A		-	Disabled	-	Disabled	-	Disabled
			-	Disabled	-	Disabled	-	Disabled
04	W12-16A		-	Disabled	-	Disabled	-	Disabled
			-	Disabled	-	Disabled	-	Disabled
05	W20-16A		-	Disabled	-	Disabled	-	Disabled
			-	Disabled	-	Disabled	-	Disabled
06	WSi24-32A		ScheduleName_01	Daily - Off	-	Disabled	ScheduleName_05	Weekly - Off
			ScheduleName_02	Daily - On	-	Disabled	ScheduleName_06	Weekly - On
07	WSi10-32A		-	Disabled	-	Disabled	-	Disabled
			-	Disabled	-	Disabled	-	Disabled
08	WSi24-32A		-	Disabled	-	Disabled	-	Disabled
			-	Disabled	-	Disabled	-	Disabled

☒ Auto data refresh :  Untick during data input

Search

 Search new installed PDUs

\* Press F11 to enlarge or diminish the screen

Part IV. Software Usage & Operation

In < **Outlet Schedule Setting** >, user can set max. 6 outlet On / Off schedules in each PDU.  
The outlet schedule can be set on one-time, daily or weekly basis.  
To set the outlet schedule, please follow the steps in next page

Outlet schedule setting

PDU level : 01 V24C13-32A-WSi

Stausts : Connected

Name : WSi24-32A

Location : default\_pdu\_loc

Outlet schedule : 01 ☐ Disable ☒ Enable

Name : ScheduleName\_01


Action : ☒ OFF ☐ ON


Time : ☒ Daily ☐ Weekly ☐ One-Time


00 : 00 ( 24 hours format )


Outlet schedule


PDU

☐ 01  outlet\_name\_01


☐ 02  outlet\_name\_02


☐ 03  outlet\_name\_03


☐ 04  outlet\_name\_04


☐ 05  outlet\_name\_05


☐ 06  outlet\_name\_06


☐ 07  outlet\_name\_07


☐ 08  outlet\_name\_08


☐ 09  outlet\_name\_09


☐ 10  outlet\_name\_10


☐ 11  outlet\_name\_11


☐ 12  outlet\_name\_12


☐ 13  outlet\_name\_13


☐ 14  outlet\_name\_14


☐ 15  outlet\_name\_15


☐ 16  outlet\_name\_16


☐ 17  outlet\_name\_17


☐ 18  outlet\_name\_18


☐ 19  outlet\_name\_19

☐ 20  outlet\_name\_20

☐ 21  outlet\_name\_21

☐ 22  outlet\_name\_22

☐ 23  outlet\_name\_23

☐ 24  outlet\_name\_24

Apply Save new data

Exit Return to OUTLET SCHEDULE

Cancel Cancel new data input

UM-IPM-03-Q114V1

P.31

www.austin-hughes.com

Part IV. Software Usage & Operation

PDU outlet schedule is a function allowing users to set a specific time to switch either ON or OFF the outlets on daily, weekly or one-time basis.









Each PDU provides **6 schedule tasks**. Users can follow the steps below to enable the PDU outlet schedule

**Step 1.** Go to < **Outlet Schedule Overview** > page, Click “ **Setting** ”

Outlet schedule overview

IP dongle name : default\_ipd\_name  
IP address : 192.168.1.82

Page : 1 2

PDU Level	Name	Setting	Outlet Schedule # 1 - 2		Outlet Schedule # 3 - 4		Outlet Schedule # 5 - 6	
			Name	Action	Name	Action	Name	Action
01	WSi24-32A		ScheduleName_01	Daily - Off	-	Disabled	-	Disabled
			ScheduleName_02	Daily - Off	-	Disabled	-	Disabled
02	WSi20-13A		-	Disabled	-	Disabled	-	Disabled
			-	Disabled	-	Disabled	-	Disabled
03	W16-30A		-	Disabled	-	Disabled	-	Disabled
			-	Disabled	-	Disabled	-	Disabled
04	W12-16A		-	Disabled	-	Disabled	-	Disabled
			-	Disabled	-	Disabled	-	Disabled
05	W20-16A		-	Disabled	-	Disabled	-	Disabled
			-	Disabled	-	Disabled	-	Disabled
06	WSi24-32A		ScheduleName_01	Daily - Off	-	Disabled	ScheduleName_05	Weekly - Off
			ScheduleName_02	Daily - On	-	Disabled	ScheduleName_06	Weekly - On
07	WSi10-32A		-	Disabled	-	Disabled	-	Disabled
			-	Disabled	-	Disabled	-	Disabled
08	WSi24-32A		-	Disabled	-	Disabled	-	Disabled
			-	Disabled	-	Disabled	-	Disabled

☒ Auto data refresh :  Untick during data input

Search

Search new installed PDUs

\* Press F11 to enlarge or diminish the screen

## Part IV. Software Usage & Operation

**Step 2.** In < **Outlet Schedule Setting** > page, Select “ **Outlet schedule 1** ” & Tick “ **Enable** ”

**Step 3.** Provide the name of the outlet schedule

**Step 4.** Select the action ( either ON or OFF )

**Step 5.** Select the time for outlet schedule.

Outlet schedule : 1 ☐ Disable ☒ Enable  
Name : OutletSchedule01  
Action : ☒ OFF ☐ ON  
Time : ☒ Daily ☐ Weekly ☐ One-Time  
00 : 00 ( 24 hours format )

**Daily ON / OFF Schedule**

Outlet schedule : 1 ☐ Disable ☒ Enable  
Name : OutletSchedule01  
Action : ☒ OFF ☐ ON  
Time : ☐ Daily ☒ Weekly ☐ One-Time  
Sun  
00 : 00 ( 24 hours format )

**Weekly ON / OFF Schedule**

Outlet schedule : 1 ☐ Disable ☒ Enable  
Name : OutletSchedule01  
Action : ☒ OFF ☐ ON  
Time : ☐ Daily ☐ Weekly ☒ One-Time  
01 / 01 ( MM / DD date format )  
00 : 00 ( 24 hours format )

**One-time ON / OFF Schedule**

## Part IV. Software Usage & Operation

**Step 6.** Tick the outlets of the connected PDU ( s ) to switch ON / OFF based on the action you selected

Outlet schedule

PDU

<input checked="" type="checkbox"/>	01	outlet_name_01
<input checked="" type="checkbox"/>	02	outlet_name_02
<input type="checkbox"/>	03	outlet_name_03
<input type="checkbox"/>	04	outlet_name_04
<input type="checkbox"/>	05	outlet_name_05
<input type="checkbox"/>	06	outlet_name_06
<input type="checkbox"/>	07	outlet_name_07
<input type="checkbox"/>	08	outlet_name_08
<input type="checkbox"/>	09	outlet_name_09
<input type="checkbox"/>	10	outlet_name_10
<input type="checkbox"/>	11	outlet_name_11
<input type="checkbox"/>	12	outlet_name_12
<input type="checkbox"/>	13	outlet_name_13
<input type="checkbox"/>	14	outlet_name_14
<input type="checkbox"/>	15	outlet_name_15
<input type="checkbox"/>	16	outlet_name_16
<input type="checkbox"/>	17	outlet_name_17
<input type="checkbox"/>	18	outlet_name_18
<input type="checkbox"/>	19	outlet_name_19
<input type="checkbox"/>	20	outlet_name_20
<input type="checkbox"/>	21	outlet_name_21
<input type="checkbox"/>	22	outlet_name_22
<input type="checkbox"/>	23	outlet_name_23
<input type="checkbox"/>	24	outlet_name_24

Apply Save new data Exit Return to OUTLET SCHEDULE

Cancel Cancel new data Input

**Step 7.** Click “ **Apply** ” to save the settings

**Step 8.** Repeat step 2 to 7 for Outlet Schedule 2 to 6 if necessary



If the outlet schedule task is “ **One-Time** ”, that specific task will be disabled automatically once the action is completed.

To cancel the outlet schedule, tick “ **Disable** ” & Click “ **Apply** ” to finish the changes.

Part V. Events / Log / Report

< Event > provides past 2000 event records of PDUs’ configuration & connection / outlet configuration / sensors’ configuration & connection in an IP dongle group

IP dongle groups

010203040506070809101112131415

161718192021222324252627282930

First / Previous12345678910Next / Last

Last 2000 log records.

Date	Time	Event	Description
2012/05/23	16:39:31	PDU configuration	[ - ] : PDU Circuit breaker return to normal - PDU Level 01 - Circuit 01
2012/05/23	13:45:10	PDU configuration	[ - ] : PDU Circuit breaker tripped - PDU Level 01 - Circuit 01

The types of event

- IP dongle connection

Disconnection / Reconnection

- PDU connection

Disconnection / Reconnection

- TH connection

Disconnection / Reconnection

- PDU configuration

(1) Change alarm amp.

(2) Change low alert amp.

(3) Reset peak amp /w date and time

(4) Reset kWh /w date and time

(5) Change PDU name

(6) Change PDU location

(7) Amp. alarm

(8) Amp. low alert

(9) Amp. normal

(10) Circuit Breaker tripped / return to normal

(11) Set PDU to maintenance

(12) Remove PDU from maintenance

- Outlet configuration

(1) Switch outlet on / off

(2) Change outlet name

(3) Change power up sequence delay

(4) Change alarm amp.

(5) Change low alert amp.

(6) Reset peak amp /w date and time

(7) Reset kWh /w date and time

(8) Amp. alarm

(9) Amp. low alert

(10) Amp. normal

- TH configuration

(1) Activate / Deactivate TH Sensor

(2) Change temp. alarm

(3) Change humid. alarm

(4) Change TH location

(5) Temp. alarm

(6) Humid. alarm

< PDU log > provides past 2000 log records of each PDU. The software will generate a PDU log record every 10 mins.

IP dongle groups

010203040506070809101112131415

161718192021222324252627282930

PDU log

PDU level :01V12C13/4C19-32A-WSi

Name :WS16-32A

Current status :Connected

Location :Server\_Rack\_001

Date	Time	Name	Location	Status	Circuit A			Circuit B			Total	
					Amp		kWh	Amp		kWh	Amp	kWh
					Max.	Load / Alarm / Low alert		Max.	Load / Alarm / Low alert		Load	
2012/05/22	10:18:38	WS20-32A	Server_Rack_001	Connected	16	/ 0.0 / 13.0 / 0.0	0.00	16	/ 0.0 / 13.0 / 0.0	0.00	0.0	0.00
2012/05/22	10:11:12	WS20-32A	Server_Rack_001	Connected	16	/ 0.0 / 13.0 / 0.0	0.00	16	/ 0.0 / 13.0 / 0.0	0.00	0.0	0.00

First / Previous12345678910Next / Last

Last 2000 log records.

\* Press F11 to enlarge or diminish the screen

UM-IPM-03-Q114V1

P.35

www.austin-hughes.com



Part V. Events / Log / Report

< Outlet log > provides past 2000 log records of each PDU's outlet. The software will generate an outlet log record every 10 mins.

IP dongle groups

01

02

03

04

05

06

07

08

09

10

11

12

13

14

15

16

17

18

19

20

21

22

23

24

25

26

27

28

29

30

Outlet log

PDU level :

01

V12C13/4C19-16A-WSi

Name :

12C134C19-16A-WSi

Location :

Server\_Rack\_001

Outlet :

01

Name :

IBM\_Server\_1

Current status :

ON

Date	Time	Name	Status	Amp					kWh
				Load	/	Alarm	/	Low alert	
2012/08/10	13:25:43	12C13/4C19-16A-WSi	OFF	-	/	-	/	-	-
2012/08/10	13:15:42	12C13/4C19-16A-WSi	OFF	-	/	-	/	-	-
2012/08/10	13:05:41	12C13/4C19-16A-WSi	OFF	-	/	-	/	-	-
2012/08/10	12:55:40	12C13/4C19-16A-WSi	OFF	-	/	-	/	-	-
2012/08/10	12:45:39	12C13/4C19-16A-WSi	OFF	-	/	-	/	-	-
2012/08/10	12:35:38	12C13/4C19-16A-WSi	OFF	-	/	-	/	-	-
2012/08/10	12:25:37	12C13/4C19-16A-WSi	OFF	-	/	-	/	-	-
2012/08/10	12:15:36	12C13/4C19-16A-WSi	OFF	-	/	-	/	-	-
2012/08/10	12:05:35	12C13/4C19-16A-WSi	ON	0.0	/	10.0	/	0.0	0.04
2012/08/10	11:55:34	12C13/4C19-16A-WSi	ON	0.0	/	10.0	/	0.0	0.04
2012/08/10	11:45:33	12C13/4C19-16A-WSi	ON	0.0	/	10.0	/	0.0	0.04
2012/08/10	11:35:32	12C13/4C19-16A-WSi	ON	0.0	/	10.0	/	0.0	0.04

First / Previous

1

2

3

4

5

6

7

8

9

10

Next / Last

Last 2000 log records.

\* Press F11 to enlarge or diminish the screen

< TH log > provides past 2000 TH log records of each PDU. The software will generate a TH log record every 10 mins.

IP dongle groups

01

02

03

04

05

06

07

08

09

10

11

12

13

14

15

16

17

18

19

20

21

22

23

24

25

26

27

28

29

30

TH log

PDU level :

01

V12C13/4C19-32A-WSi

Name :

WS16-32A

Current status :

Connected

Location :

Server\_Rack\_001

Date	Time	Status	Location	TH 1		TH 2	
				°C	%	°C	%
				Temp. / Alarm	Humid. / Alarm	Temp. / Alarm	Humid. / Alarm
2012/05/22	10:27:38	Connected	-	- / -	- / -	- / -	- / -
2012/05/22	10:17:36	Connected	-	- / -	- / -	- / -	- / -

First / Previous

1

2

3

4

5

6

7

8

9

10


Next / Last

Last 2000 log records.

\* Press F11 to enlarge or diminish the screen

Part V. Events / Log / Report

< **Daily kWh log - PDU** > provides past 2000 daily energy consumption log records of each PDU. The record is logged at 00:00 everyday ( +/- 5 mins. ) for previous day

 The daily kWh log will not be recorded at 00:00 if the PDU connected less than 24 hours

IP dongle groups

01

02

03

04

05

06

07

08

09

10

11

12

13

14

15

16

17

18

19

20

21

22

23

24

25

26

27

28

29

30

Daily kWh log - PDU

PDU level :

01

V12C13/4C19-32A-WSi

Name :

WS16-32A

Current status :

Connected

Location :

Server\_Rack\_001

Date

Time

Status

Circuit A  
kWh

Circuit B  
kWh

Total  
kWh

First / Previous

1

2

3

4

5

6

7

8

9

10

Next / Last

Last 2000 log records.

\* Press F11 to enlarge or diminish the screen

< **Daily kWh log - Outlet** > provides past 2000 daily energy consumption log records of each PDU's outlet. The record is logged at 00:00 everyday ( +/- 5 mins. ) for previous day. ( Wi kWh Monitored & WSi Outlet kWh Switched PDU only )

IP dongle groups

01

02

03

04

05

06

07

08

09

10

11

12

13

14

15

16

17

18

19

20

21

22

23

24

25

26

27

28

29

30

Daily kWh log - Outlet

PDU level :

01

V12C13/4C19-16A-WSi

Name :

12C134C19-16A-WSi

Location :

Server\_Rack\_001

Outlet :

01



Name :

IBM\_Server\_1

Current status :

ON

Date

Time

Status

Outlet  
kWh

First / Previous

1

2

3

4

5

6

7

8

9

10

Next / Last

Last 2000 log records.

\* Press F11 to enlarge or diminish the screen

## Part V. Events / Log / Report

< **Report** > provides monthly report for **PDU log** , **Outlet log** , **TH Sensor log** , **Daily kWh log** & **Event log** which can be exported in CSV format.

Please follow the steps below to export the log category you want :


### Step 1. Select “ **Category** ” , “ **Period** ” & “ **Target** ”



The screenshot shows a dialog box with three main sections: **Category**, **Period (Year / Month)**, and **Target**. In the **Category** section, **PDU log** is selected with a checked checkbox, while **Outlet log**, **TH Sensor log**, **Daily kWh log - PDU**, **Daily kWh log - Outlet**, and **Event log** are unchecked. The **Period** section shows **2012** for the year and **01** for the month. The **Target** section shows **IP dongle group :** **01** and **PDU Level :** **01**. At the bottom, there are **Apply** and **Cancel** buttons.

### Step 2. Click “ **Apply** ” & Click “ **OK** ” from the pop up window

### Step 3. Right Click the file name below & Select “ **Save target as** ” to download the log file

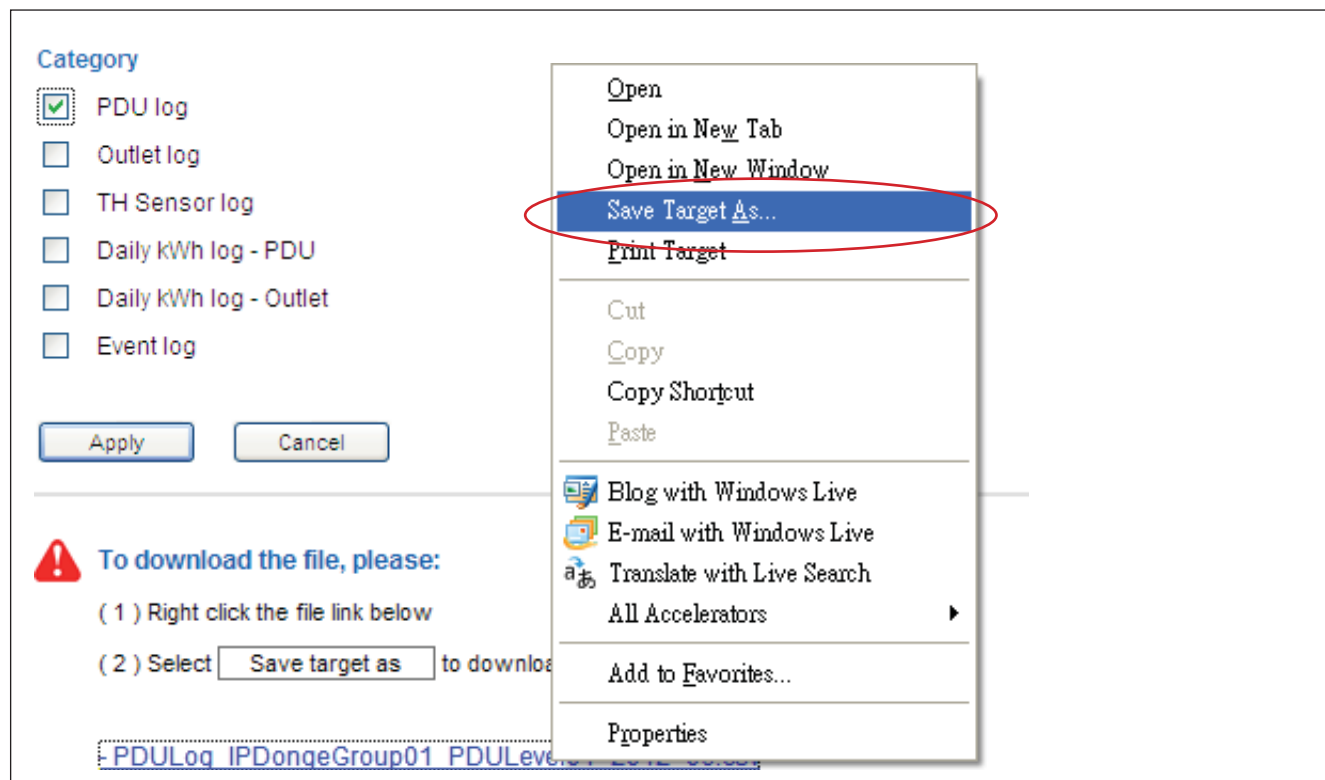

This screenshot shows the same dialog box as in Step 1, but with a right-click context menu open over the **Apply** button. The menu options include **Open**, **Open in New Tab**, **Open in New Window**, **Save Target As...** (which is highlighted with a red oval), **Print Target**, **Cut**, **Copy**, **Copy Shortcut**, **Paste**, **Blog with Windows Live**, **E-mail with Windows Live**, **Translate with Live Search**, **All Accelerators**, **Add to Favorites...**, and **Properties**. Below the dialog box, there is a warning icon and text: **To download the file, please:**  
( 1 ) Right click the file link below  
( 2 ) Select **Save target as** to download  
Below this text is a link: [PDULog IPDongleGroup01 PDULevel: 01](#).

### Step 4. Click “ **Close** ” to complete or “ **Open** ” to view the content of log file

..... **Complete**

## Part VI. SNMP

The IP dongle can manage the connected W series PDUs in a single daisy-chain up to 16 PDUs via SNMP v2c ( Simple Network Management Protocol).



Only IP dongle model : IPD-02-S or IPD-H02-S can support SNMP

### ( I ). Accessing MIB Files

Use the World Wide Web (WWW) to download the SNMP MIB file at this URL:

<http://www.austin-hughes.com/support/utilities/infrapower/IPD-MIB.mib>

### ( II ). Enabling SNMP Support

The following procedure summarizes how to enable the IP Dongle for SNMP support.

**Step 1.** Connect the IP dongle to a computer. ( Please refer to P.12 )

**Step 2.** Open the Internet Explorer ( I.E. ) version 8.0 or above


**Step 3.** Enter the configured IP dongle address into the I.E. address bar.  
Default IP address is “ **192.168.0.1** “

**Step 4.** Enter “ **Login name** “ & “ **Password** “. Default login name & password are “ **00000000** “

A login dialog box with a white background and a thin black border. It contains two text input fields. The first field is labeled 'Login name' and the second is labeled 'Password'. Below the fields are two buttons: 'Login' on the left and 'Cancel' on the right.

## Part VI. SNMP

**Step 5.** Select the **SNMP** from the left navigation

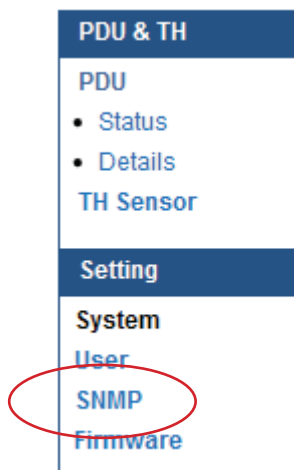

**Step 6.** The **SNMP** Settings window appears as below:


A screenshot of the 'SNMP' settings window. The window has a title bar 'SNMP'. It contains several sections: 'SNMP agent' with radio buttons for 'Enable' (selected) and 'Disable'; 'SNMP polling' with text input fields for 'Read community' (containing 'public') and 'Write community' (containing 'private'); 'SNMP traps' with a dropdown menu set to 'v2Trap'; and 'Management station' with text input fields for 'Station IP' (containing '138.168.2.225'), 'Trap port' (containing '162'), and 'Trap community' (containing 'private'). At the bottom, there are two buttons: 'Apply' and 'Cancel'. The 'Apply' button is circled in red.

**Step 7.** Click “ **Enable** ” in “ **SNMP Agent** ” to start the SNMP agent service

**Step 8.** Input “ **Read Community** “. Default is “ **public** ”

**Step 9.** Input “ **Write Community** “. Default is “ **private** ”

**Step 10.** Select “ **disabled** ” or “ **V2Trap** ” in “ **SNMP Traps** ”

 If select “ **V2Trap** ”, please input IP address of the SNMP management station in “ **Station IP:** ”

**Step 11.** Click “ **Apply** ” to finish the SNMP settings

### InfraPower Manager - IPM-03

#### 1. What is InfraPower Manager?

The InfraPower Manager IPM-03 is a Windows based system to consolidate management of max. 480 PDUs via 30 IP dongles, using a simple web interface which monitors and controls the WSi Outlet kWh Switched / Wi Outlet kWh Monitored / WS kWh Switched / W kWh Monitored PDUs in the data center. Authorized users have a secure control over outlets to power ON / OFF at the managed device level. It also provides the detailed PDU, daily energy consumption and event logged records, and sends alarm email once ampere & Temp. / Humid. over the predefined alarm threshold.

Please find the link below:

<http://www.austin-hughes.com/support/software/infrapower/IPM-03.msi>

#### 2. Which OS platform does IPM-03 support?

- MS Windows XP Professional with SP3 (32bit only)
- MS Windows 7 Professional with SP1
- MS Windows 7 Ultimate with SP1
- MS Windows Server 2003 R2 Standard Edition with SP2
- MS Windows Server 2008 Standard Edition SP2
- MS Windows Server 2008 R2 Standard Edition SP1



**Ensure the user logs in the management PC as a member of “Administrators” Group before IPM-03 Installation and execution.**

#### 3. Why user can't login to the Management PC remotely ?

Make sure the port for web server is added in the firewall setting and the services of web server is started in the management PC.

#### 4. Which database does the IPM-03 support?

PostgreSQL

#### 5. What is the PostgreSQL default password for IPM-03?

1qaz2WSX

#### 6. How can I receive alarm email and get full log report?

Ensure that IPM-03 is executed and the alarm server is configured properly and being enabled.

#### 7. What is the default user name & password of IPM-03?

Default user name “ **admin** ” & password “ **00000000** ”

#### 8. What is the command password of IPM-03?

Each IP dongle group has its command password. It will be requested for any PDU configuration and control. The administrator can set different command password for different IP dongle group or all IP dongle groups use the same password.

#### 9. The WSi Outlet kWh Switched / Wi Outlet kWh Monitored / WS kWh Switched / W kWh Monitored PDUs can't be found by IPM-03?

Please double check the cable connection and the level setting of each PDU. If a cascade chain has duplicate the level PDUs, it will cause this problem.

## Part VII. FAQ

### 10. Is it possible to manage the WSi Outlet kWh Switched / Wi Outlet kWh Monitored / WS kWh Switched / W kWh Monitored PDUs from different workstations?

Yes, the InfraPower manager supports 5 concurrent login users from different workstations.

#### IP dongle

##### 1. What is the IP dongle?

The IP dongle provides a simple and economical way to consolidate management of max. 16 pcs WSi Outlet kWh Switched / Wi Outlet kWh Monitored / WS kWh Switched / W kWh Monitored PDUs, by a single IP connection to the network.

##### 2. What is the IP setup utilities?

This is a windows application used to assign the IP address of IP dongle. You can download the IP setup utilities from the link below:

<http://www.austin-hughes.com/support/utilities/infrapower/IPdongleSetup.msi>

##### 3. Does the IP dongle support DHCP (Dynamic Host Configuration Protocol)?

No, the IP dongle only works with static IP-address.

##### 4. Will the reset of IP dongle affect the power to the outlets?

No, the IP dongle operates on a separate circuit, so the power to the outlets will remain unchanged.

##### 5. How can I replace a failed IP dongle?

As the IP dongle is hot swappable, without power disconnection, you can unplug the RJ45 connector and slide out the failed IP dongle from the WSi Outlet kWh Switched / Wi Outlet kWh Monitored / WS kWh Switched / W kWh Monitored PDU. Then replace a new one for the PDU and re-configure the IP address to fit your network setting. ( Please refer to user manual < 2.2 > for details )

#### Temp. Humidity sensor

##### 1. How accurate is the Temp. & Humid. sensor?

It is accurate to  $\pm 1^{\circ}\text{C}$  ( typical ) &  $\pm 4.5\%$  RH ( typical ).

##### 2. How accurate is the Temp. sensor?

It is accurate to  $\pm 1.5^{\circ}\text{C}$  ( typical ).

##### 3. How to install the Temp. / Temp. & Humid. sensor ?

Plug in the Temp. / Temp. & Humid. sensor ONLY AFTER the PDU is ON.

## Part VII. FAQ

### Meter for W series Intelligent kWh PDU

#### 1. What is feature of the Wi Outlet kWh Monitored / W kWh Monitored PDU?

The W kWh Monitored PDU offers simple & highly reliable power distribution to multiple equipments, and built-in a 1.8" LCD meter indicates the total energy consumption of equipment connected to the PDU. The digital ampere meter has an interface which can connect to an IP dongle to the ethernet network, which allows managers to real-time remote monitor the PDU load thru the InfraPower manager (IPM-03).

#### 2. What is feature of the WSi Outlet kWh Switched / WS kWh Switched PDU?

The WS kWh Switched PDUs offers the same features as W kWh Monitored PDUs, with an addition remote control power capability to individual PDU outlets. The remote outlet power control allows power on/off functionality for power recycling to reboot locked-up equipment and to avoid unauthorized use of individual outlets.

#### 3. Can the WSi Outlet kWh Switched / Wi Outlet kWh Monitored / WS kWh Switched / W kWh Monitored PDUs cascade together?

Yes, the WS kWh Switched & W kWh Monitored model PDUs can connect together as a cascade chain.

#### 4. If one of the cascaded WSi Outlet kWh Switched / Wi Outlet kWh Monitored / WS kWh Switched / W kWh Monitored PDU loses power, will it affect other PDUs in the same chain?

No, the other cascaded WS kWh Switched & W kWh Monitored PDUs in upper & lower level will not be affected.

#### 5. What is the maximum cabling distance between two cascaded PDUs?

Up to 20 meter (66 feet) of CAT. 5 / 6 cable.

#### 6. What is the maximum cascade level of the WSi Outlet kWh Switched / Wi Outlet kWh Monitored / WS kWh Switched / W kWh Monitored PDU in a chain?

16 levels

### Others

#### 1. What is the default outlet status of WSi Outlet kWh Switched / WS Switched PDU ?

The default outlet status is ON.

#### 2. Will the PDU settings remain unchanged after power OFF?

Yes, the settings will remain unchanged such as PDU Name, Location, Alarm amp., Low alert amp., Outlet Name.....

#### 3. Does the InfraPower PDU has the overpower protection?

Yes, the PDU provides the resettable fuse or optional circuit breaker for the overpower protection.

#### 4. What is the standard inlet cable length of InfraPower?

3 meter ( 9.9 feet ).

#### 5. Where can I find the Catalogue / User manual /Model list / Wire diagram of InfraPower PDUs?

Please visit the [www.austin-hughes.com](http://www.austin-hughes.com)

#### 6. How can we get a further support?

Please send the email to [support@infra-power.com](mailto:support@infra-power.com) or [sales@infra-power.com](mailto:sales@infra-power.com)



## Part VII. FAQ

### PDU disconnection

#### 1. GUI shows **a certain level PDU** disconnected

##### Step 1 - PDU power off ?

Check the PDU is power ON or not.

##### Step 2 - PDU level setting duplicated in the same PDU group ?

Check and make sure PDU level is unique and not duplicated in the same PDU group.

(Please refer to to user manual < 1.2 > display 9.1 for details)

#### 2. GUI shows **from a certain level PDU to the last one** disconnected

##### Step 1 - Cable disconnected, loose or defective ?

Check the Cat. 5/6 cable connection to PDUs and network devices. Make sure the connectors are firmly attached. And check if any defects on your cable or not. If yes, replace a new one.

##### Step 2 - The first disconnected PDU failed ?

Unplug the Cat. 5/6 cable on the first disconnected PDU, then plug it to the second disconnected PDU to check if the problem caused by the first disconnected PDU.

#### 3. GUI shows **the whole group of PDU(s)** disconnected

##### Step 1 - Cable disconnected, loose or defective ?

Check the Cat. 5/6 cable connection to PDUs and network devices. Make sure the connectors are firmly attached. And check if any defects on your cable or not. If yes, replace a new one.

##### Step 2 - IP dongle failed ?

i. Check if the network setting of the IP dongle is correct or not. If duplicated IP address is in a network, it may cause such problem.

ii. Disconnect the IP dongle from the network and try to direct connect the Cat. 5/6 cable from IP dongle < LAN > port to a computer network port and use IP Setup utilities to check if the IP dongle can be found or not. If it cannot be found, the IP dongle may be failed.

##### Step 3 - 1st level PDU failed ?

Move the IP dongle from 1st level PDU to 2nd level PDU to check if the problem caused by 1st level PDU's failure or not. If yes, replace 1st level PDU.

## Part VIII. Troubleshooting

### Replacement, Removal or addition for PDU & IP dongle

#### 1. How to replace the **failed IP dongle** ?

**Step 1** - Prepare a new IP dongle.

**Step 2** - Disable alarm email in **<Alarm>** page.

**Step 3** - Replace the failed IP dongle with the new one on 1st level PDU.

**Step 4** - Configure the setting of the new IP dongle same as the old one.

(Please refer to user manual < 2.2 > for details)

**Step 5** - Click **Start Connection** in **<Status>** page for the relevant IP dongle.

**Step 6** - Enable alarm email in **<Alarm>** page again.

#### 2. How to replace the **failed 1st level PDU** with a new one ?

**Step 1** - Prepare a new PDU and set the PDU to 1st level.

(Please refer to user manual < 1.2 > display 9.1 for details)

**Step 2** - Disable alarm email in **<Alarm>** page.

**Step 3** - Power off & unplug the device(s) which connected to the PDU.

**Step 4** - Power off & remove the failed 1st level PDU from connection.

**Step 5** - Install the IP dongle on the new 1st level PDU.

**Step 6** - Install and connect the new PDU.

**Step 7** - Power on the new PDU and connect to the device(s).

**Step 8** - Click Start Connection in **<Status>** page for the relevant IP dongle.

**Step 9** - Configure the new PDU in **<Details>** and **<TH Sensor>** page such as **Alarm Amp** , **Name**, **Location...**

**Step 10** - Enable alarm email in **<Alarm>** page.

#### 3. How to replace a **failed certain level PDU** with a new one ?

**Step 1** - Prepare a new PDU and set the PDU level accordingly.

(Please refer to user manual < 1.2 > display 9.1 for details)

**Step 2** - Prepare an appropriate length Cat. 5/6 cable.

**Step 3** - Click Set maintenance in **<Details>** page for the failed PDU.

**Step 4** - Use the Cat. 5/6 cable to bridge over the failed PDU which will be replaced to minimize log / data loss.

**Step 5** - Power off & unplug the device(s) which connected to the failed PDU.

**Step 6** - Power off & remove the failed PDU from connection.

**Step 7** - Install the new PDU, cancel the cable-bridging and reconnect the PDU to the last and next one.

**Step 8** - Power on the new PDU and connect to the device(s).

**Step 9** - Click Remove maintenance in **<Details>** page for the new PDU.

**Step 10** - Configure the new PDU in **<Details>** and **<TH Sensor>** page such as **Alarm Amp**, **Name**, **Location...**





Ignore step 2 & 4 if the failed PDU is in the last level.

### Replacement, Removal or addition for PDU & IP dongle

#### 4. How to move out a PDU (without a replacement) ?

- Step 1** - Prepare an appropriate length Cat. 5/6 cable.
- Step 2** - Click **Disable Monitoring** in **<Details>** page to stop monitoring the removed PDU.
- Step 3** - Use the Cat. 5/6 cable to bridge over the removed PDU to minimize log/data loss.
- Step 4** - Power off & unplug the device(s) which connected to the PDU.
- Step 5** - Power off & remove the PDU from connection.
- Step 6** - Enable alarm email in **<Alarm>** page.

 If the removed PDU **NOT** in the last level, you **MUST** reconfigure and reset the level for the affected PDU(s) which next to the removed PDU.

 Ignore step 1 & 3 if the removed PDU is in the last level.

#### 5. How to add an extra PDU to an existing PDU group ?

- Step 1** - Prepare a PDU and set the PDU level accordingly.  
(Please refer to user manual < 1.2 > display 9.1 for details )
- Step 2** - Prepare an appropriate length Cat. 5/6 cable.
- Step 3** - Click Set maintenance in **<Details>** page for the affected PDU(s) which next to the added PDU.
- Step 4** - Install and connect the new PDU.
- Step 5** - Power on the new PDU.
- Step 6** - Reconfigure & reset the level for the affected PDU(s) which next to the added PDU.
- Step 7** - Click Remove maintenance in **<Details>** page for the affected PDU(s).
- Step 8** - Click **Search** in **<Status>** page to search the new installed PDU.
- Step 9** - Configure the new PDU in **<Details>** and **<TH Sensor>** page such as **Alarm Amp** , **Name**, **Location...**
- Step 10** - Enable alarm email in **<Alarm>** page.

 Ignored step 3, 6 & 7 if the added PDU is in the last level

## Part VIII. Troubleshooting

### 1.8" meter LCD display

#### 1. LCD meter no display.

**Step 1** - Check PDU is power ON or not.

**Step 2** - Press any button on the LCD meter. The SCREEN OFF function may be enable.  
( Please refer to user manual < 1.2 > display 9.3 for details )

**Step 3** - If the LCD meter still no display please call your dealer for support.

#### 2. The whole LCD meter display turn white?

**Step 1** - Use a pin to press the reset button to re-power the meter. Don't worry, it will not affect any settings & memories.

**Step 2** - If the LCD meter still turn white, please call your dealer for support.

### InfraPower Manager IPM-03

#### 1. Try to login InfraPower Manager IPM-03 but the web browser only shows “ HTTP 404 Not Found ”

**Step 1** - Services for Web server in management PC started ?

Make sure the services is started. Go to Control Panel -> Administrative Tools -> Services -> Apache2.2 and make sure the status is “ Started ”.

**Step 2** - Port for web server in management PC is occupied by other service ?

Check if the port for web server is used by other service. If yes, please release the port of that particular service and assign another port for it.

**Step 3** - Port for web server is added in the firewall of management PC ?

Check if the port is added in the firewall. If not, please add and enable the connection in the firewall. Please refer to user manual < 3.2 > for details.

The company reserves the right to modify product specifications without prior notice and assumes no responsibility for any error which may appear in this publication.

All brand names, logo and registered trademarks are properties of their respective owners.

Copyright 2014 Austin Hughes Electronics Ltd. All rights reserved.